







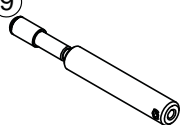

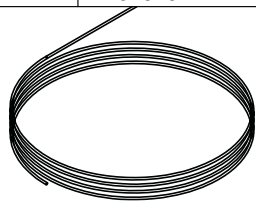




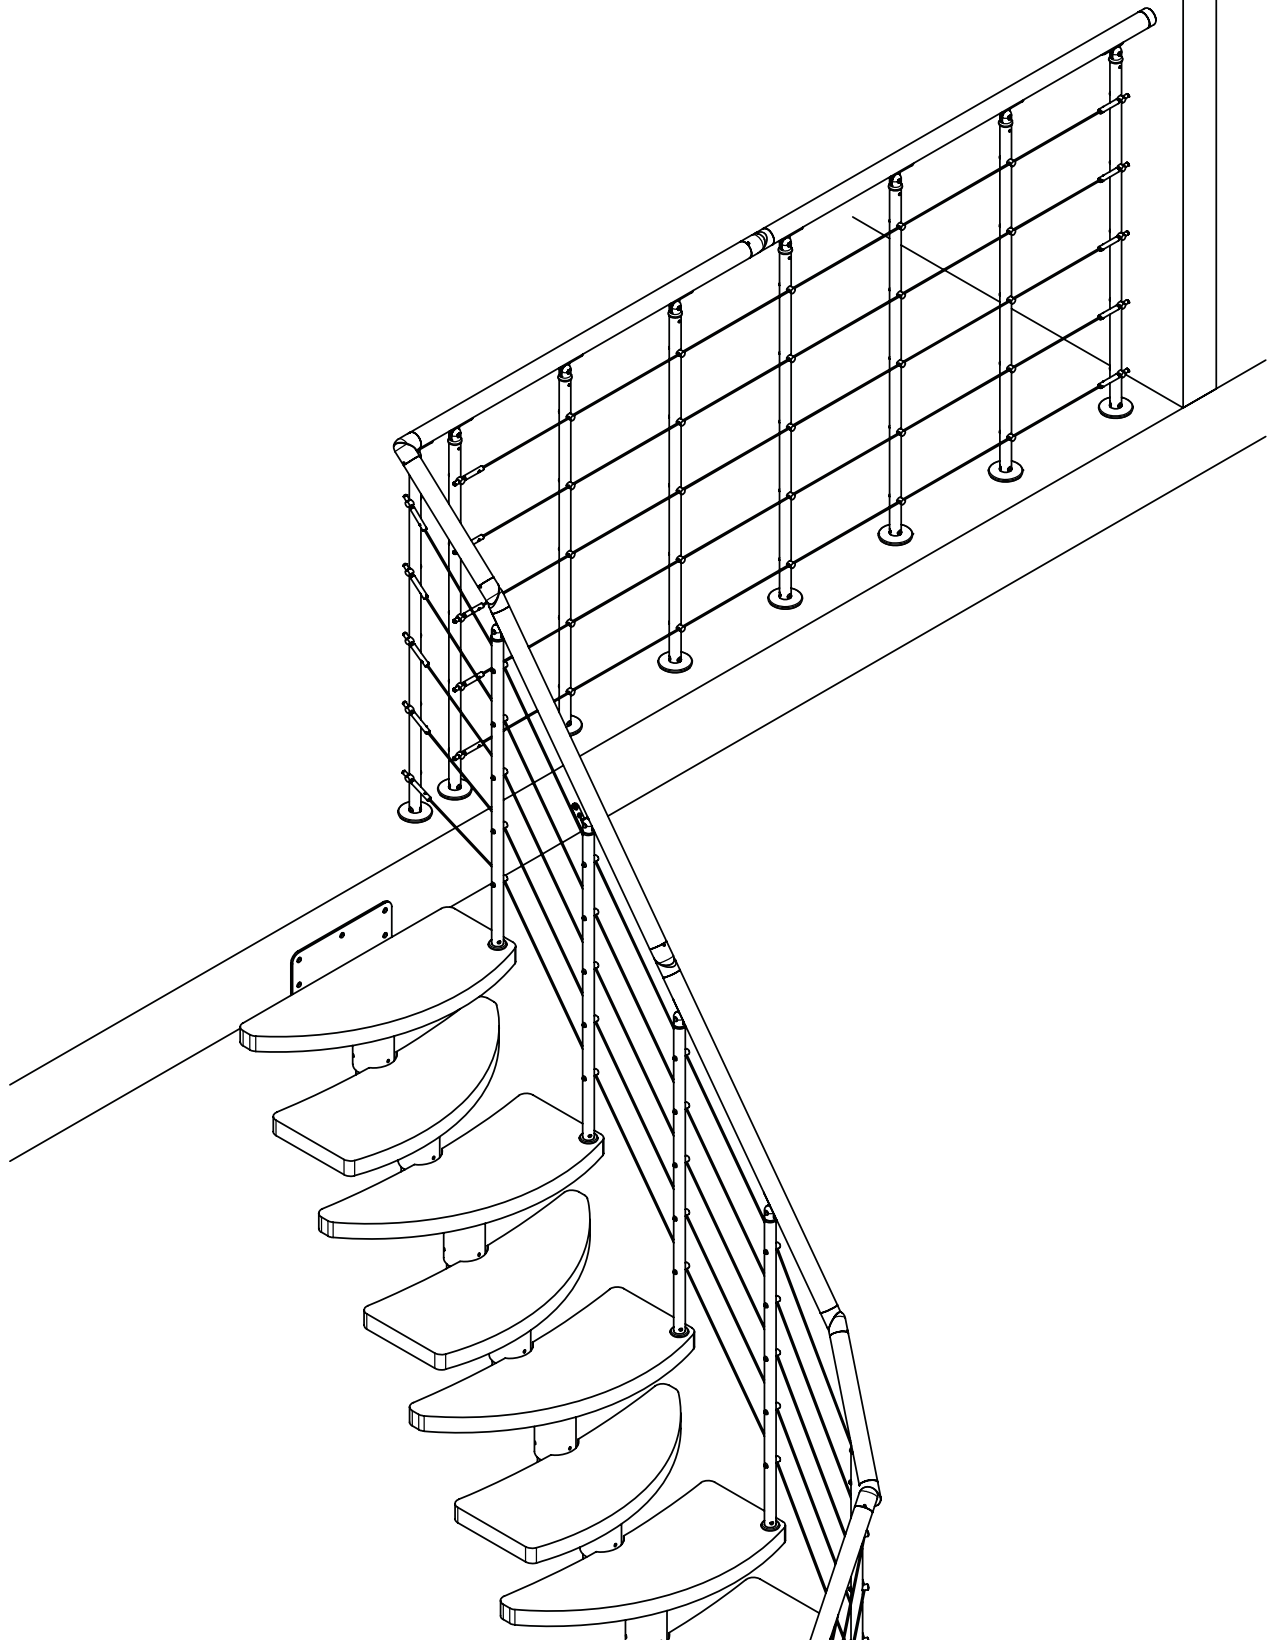









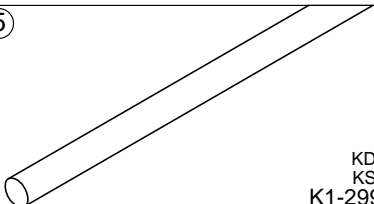


DOLLE Montageanleitung Brüstungsgeländer Basel
Mounting Instructions Balcony Banister Basel
Instructions de Montage de Balustrade Basel







 <p>910</p> <p>KD: x4 KS: x3 K2-29281</p>	 <p>KD: x4 KS: x3 K1-12207</p>	 <p>KD: x4 KS: x3 K1-29204</p>	 <p>KD: x1 KS: x1 K1-29920 Ø40x1000</p>		
	 <p>KD: x1 KS: x0 K2-01010</p>	 <p>KD: x1 KS: x0 K1-01620</p>	 <p>KD: x1 KS: x1 K2-01070</p>	 <p>KD: x10 KS: x0 K2-04200</p>	 <p>KD: x20 KS: x15 K1-04041</p>
	 <p>KD: x1 KS: x1 K1-23290 Ø3x5000</p>		<p>KD: Kit de départ KS: Kit de suite</p>		
 <p>KD: x4 KS: x3 K3-01002 M5x18</p>	 <p>KD: x4 KS: x3 K3-03020 M5</p>	 <p>KD: x4 KS: x3 K3-05060 M6x8</p>	 <p>KD: x13 KS: x9 K3-08002 Ø8x40</p>	 <p>KD: x13 KS: x9 K3-06022 Ø5x35</p>	 <p>KD: x5 KS: x2 K3-06064 Ø4x25</p>
 <p>KD: x8 KS: x6 K3-06018 Ø4x25</p>	 <p>KD: x20 KS: x15 K1-04040 M6x18</p>				



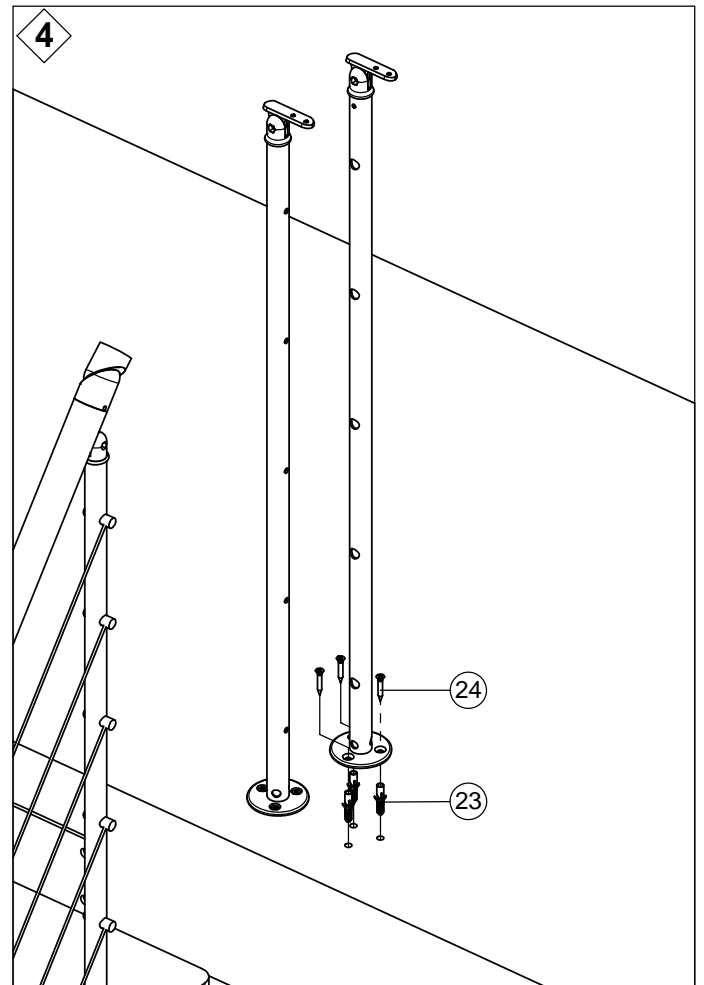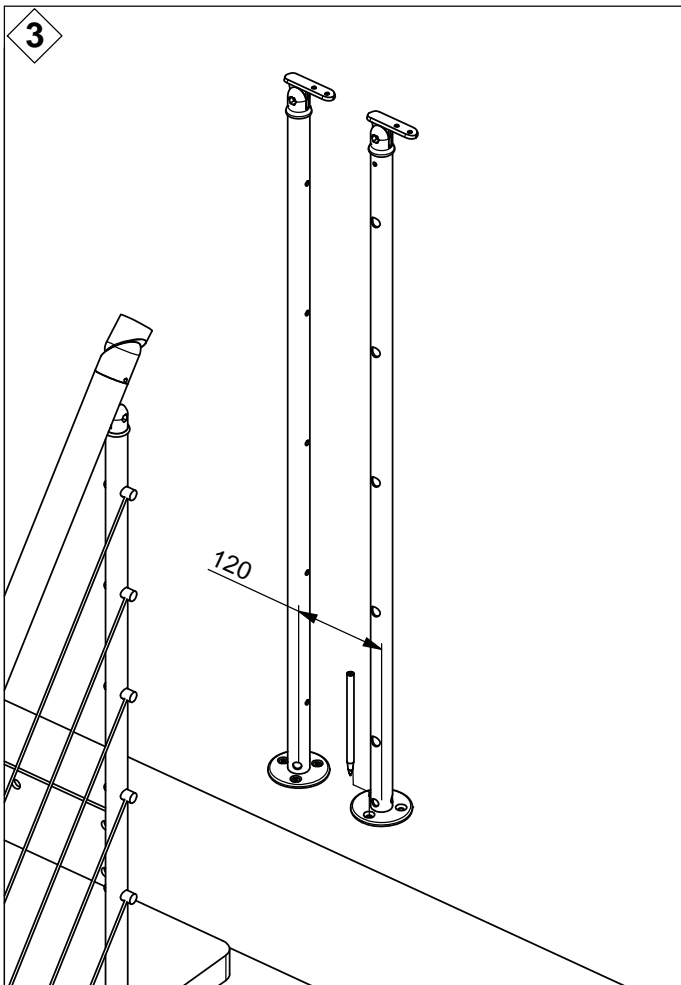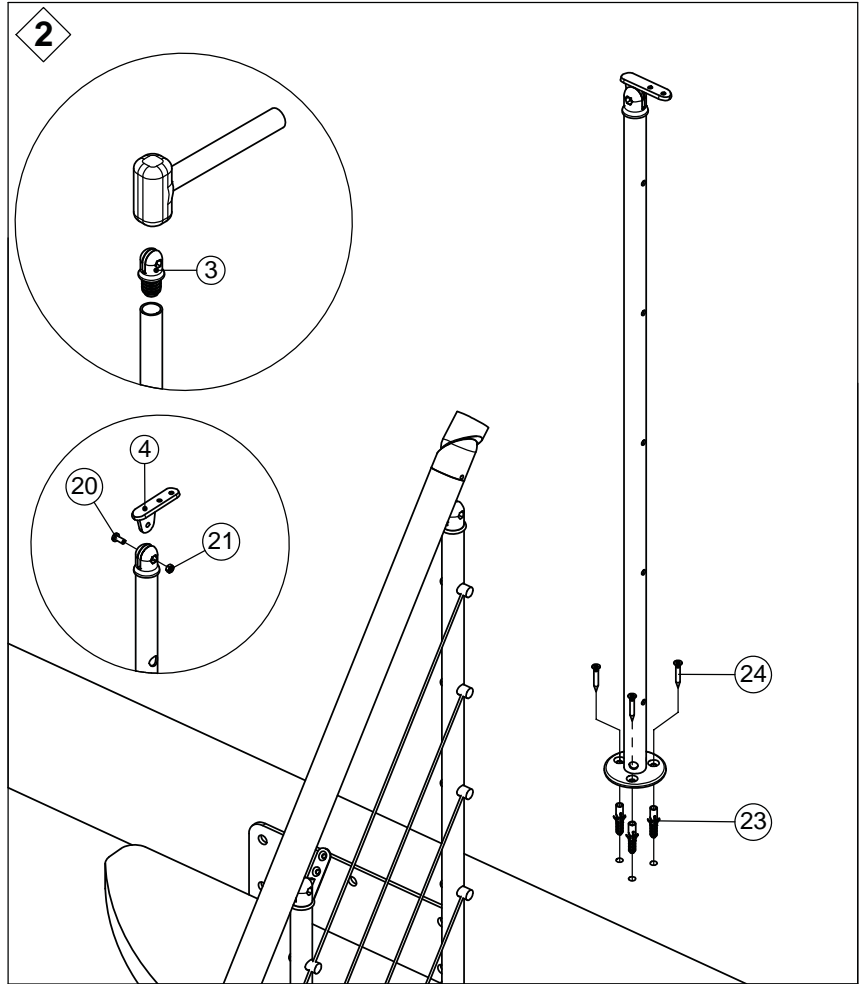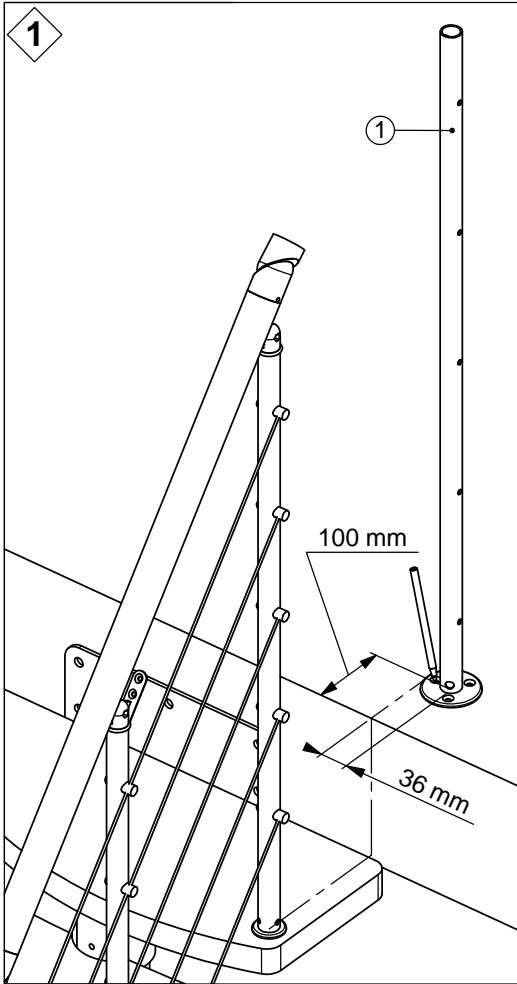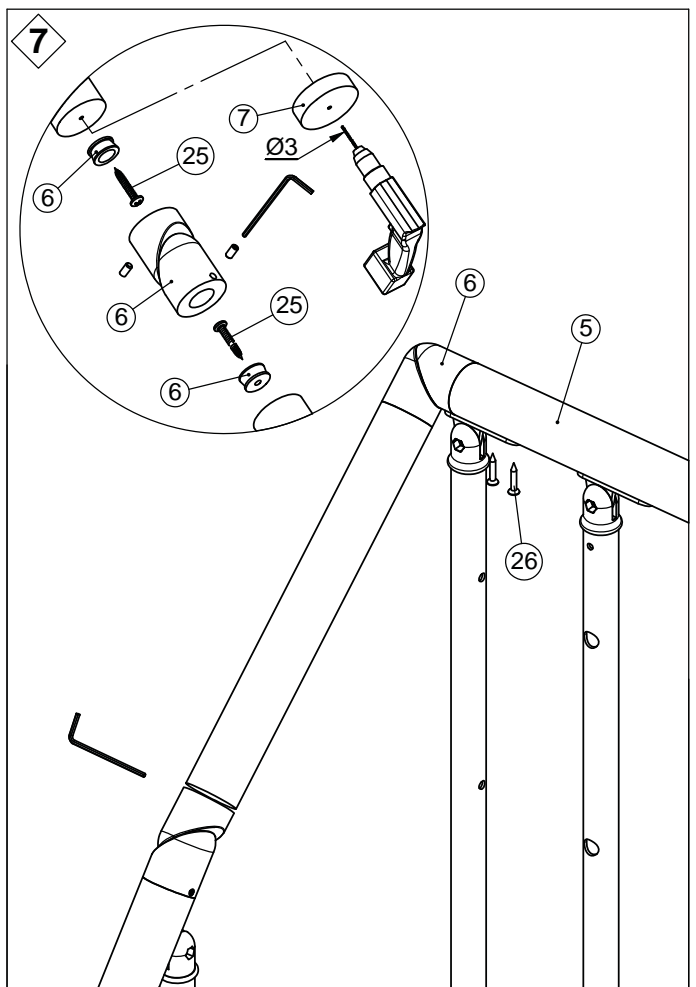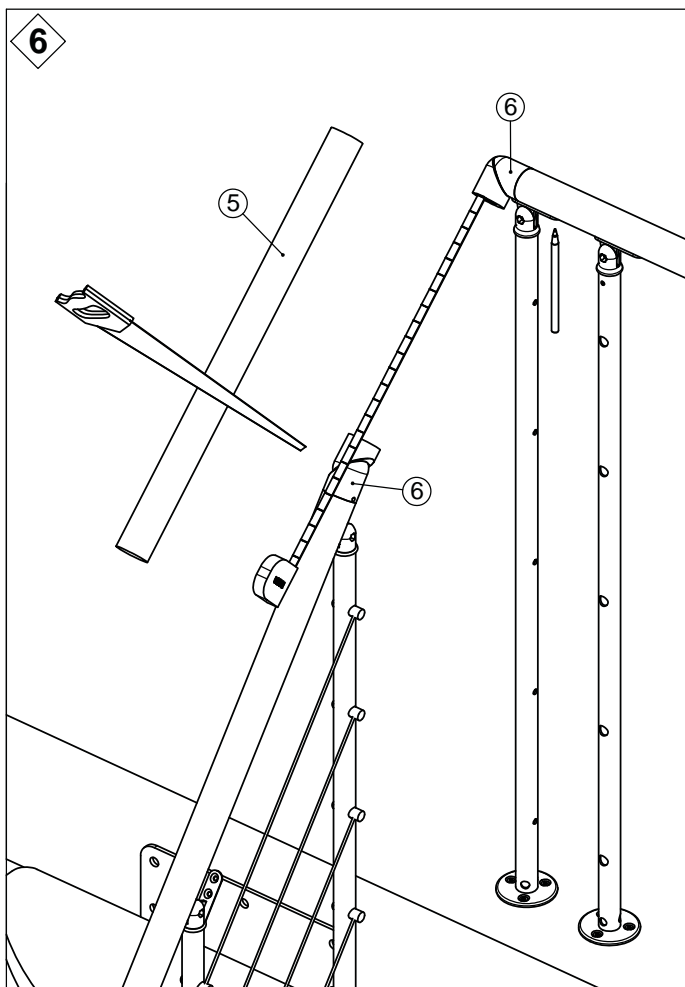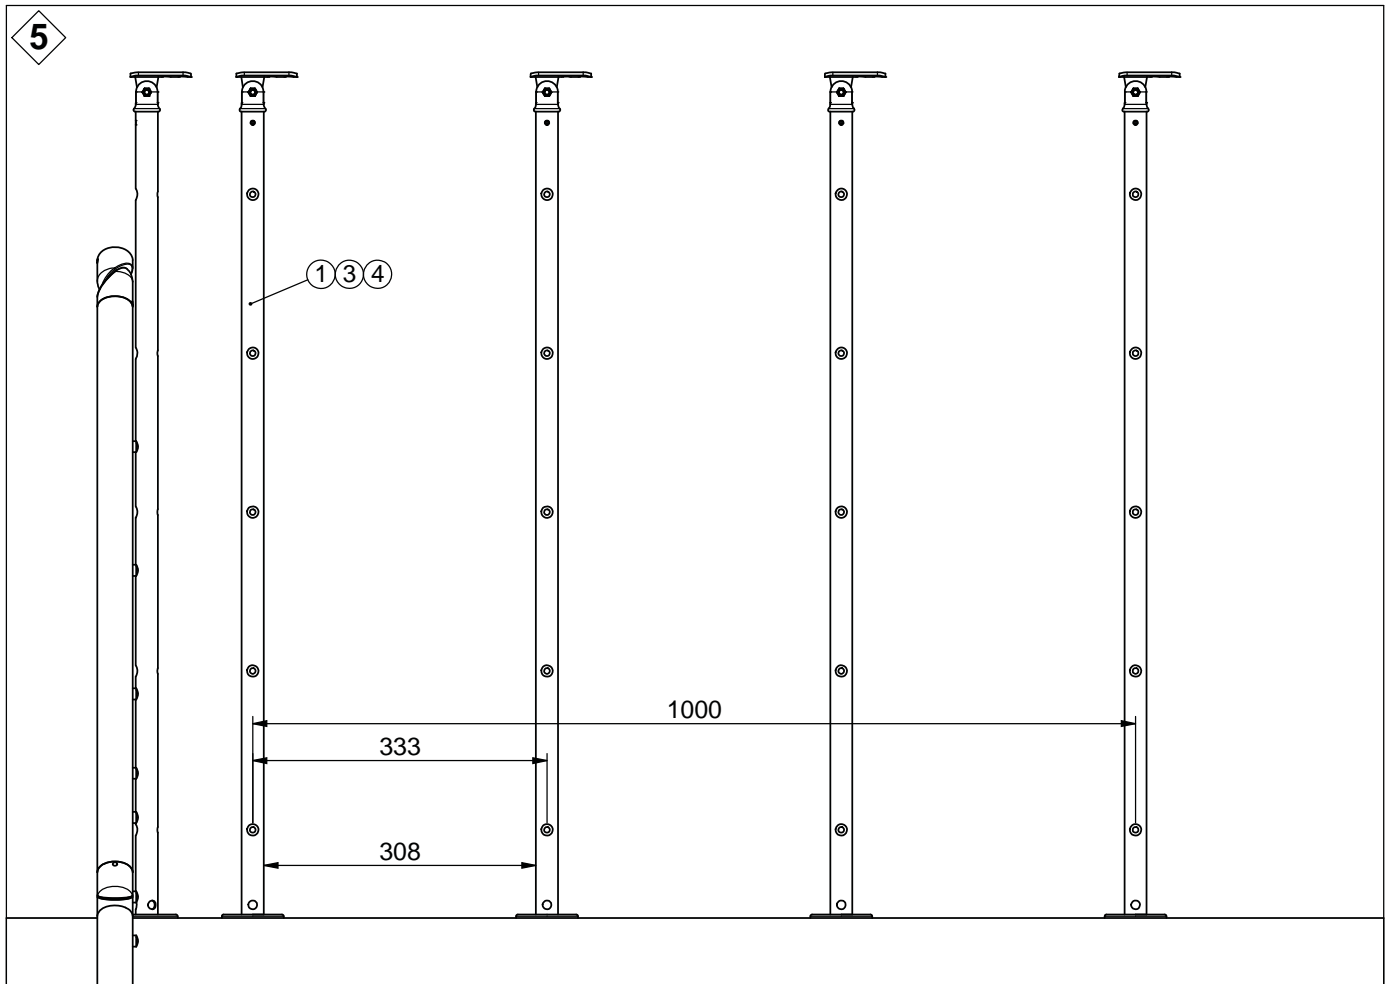

R1-99881-04

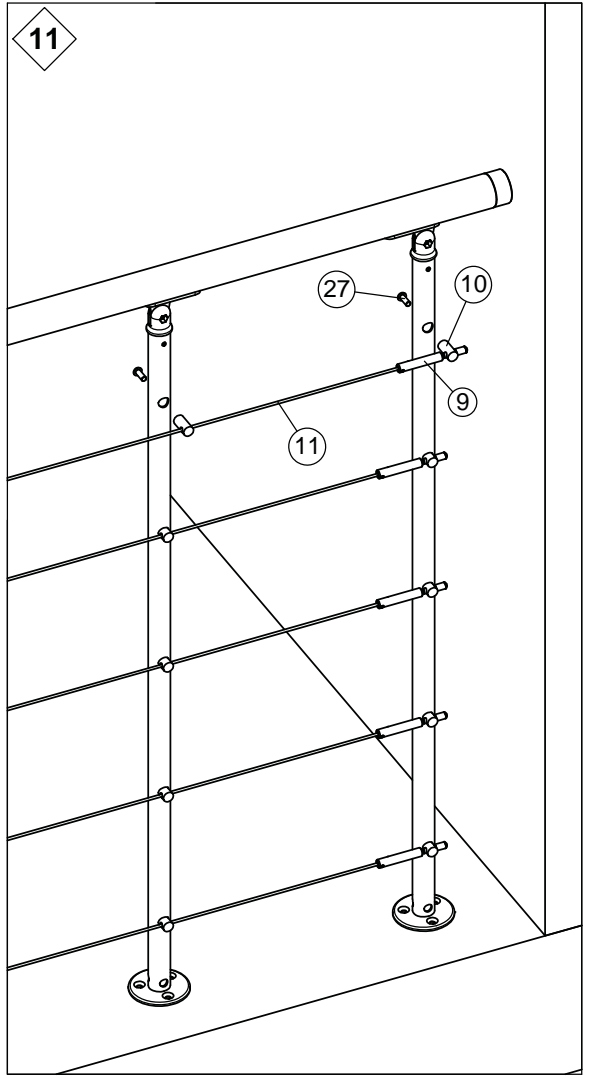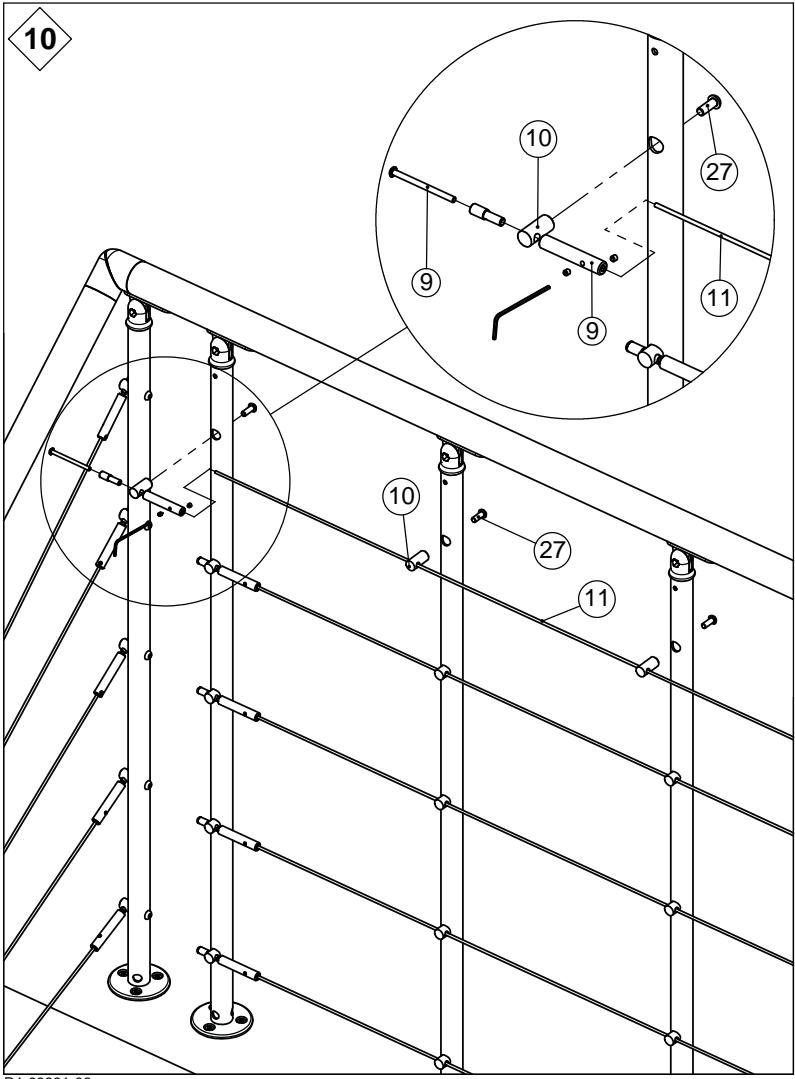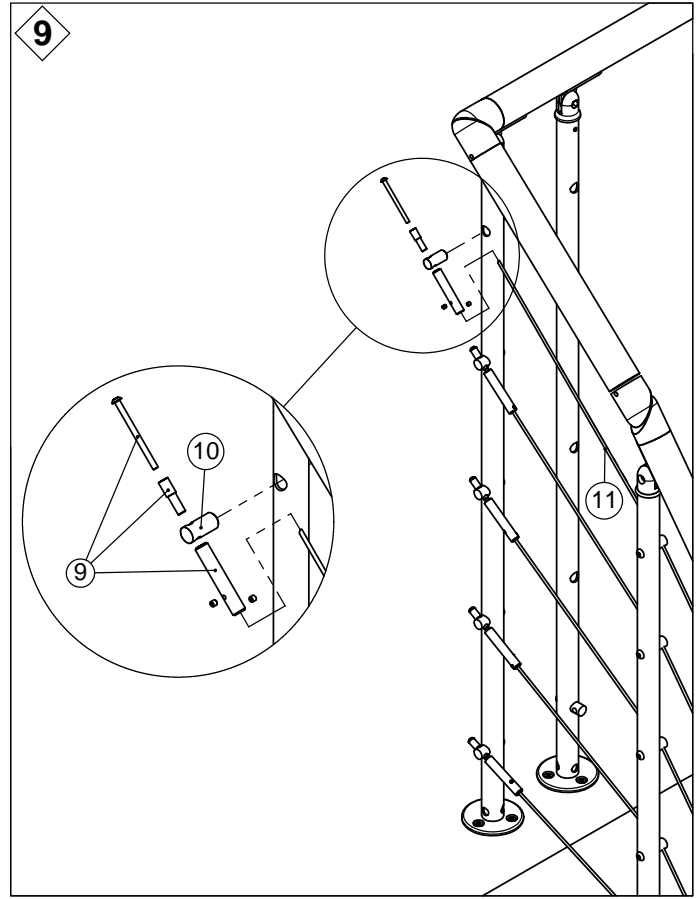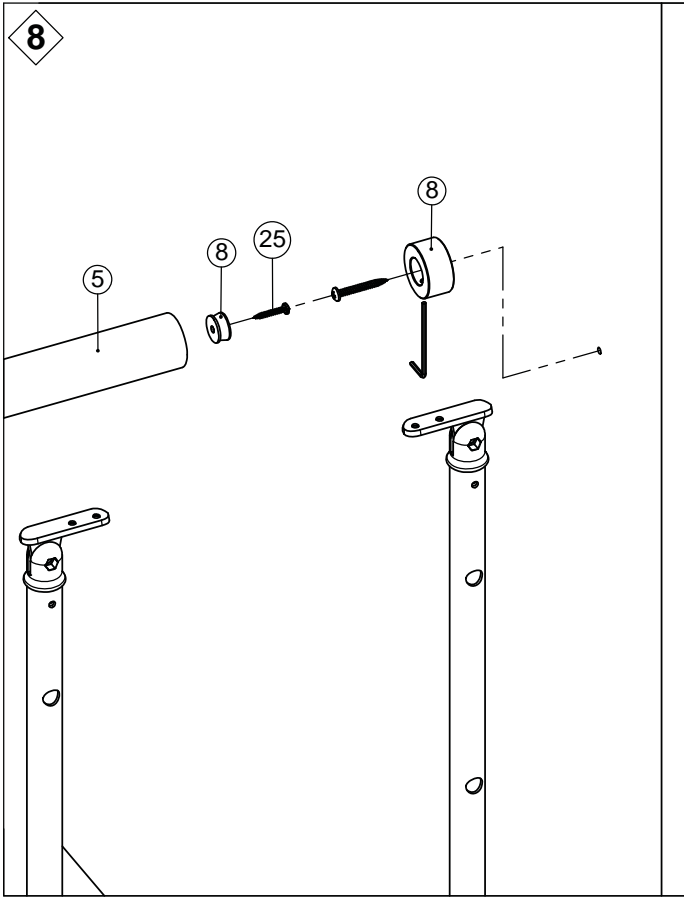

R1-99881-06