























**Start kit / Corner kit**  
**Anfangspaket / Eckenpaket**

**Startpakket / Hoekset**  
**Kit de départ / Kit d'angle**










**Startpakke / Hjørnepakke**


	<p>8</p>	<p>27</p>  <p>x 2 K1-1077720</p>	<p>31</p>  <p>x 10 K1-18099</p>				
	<p>32</p>  <p>∅ 40</p> <p>1000</p> <p>Beech / Buche / Beuken / Hêter / Bøg Oak / Eiche / Bijv / Chêne / Eg Oak white / Eiche weiß / Bijv wit / Chêne blanc / Eg hvid</p>						
	<p>33</p>  <p>∅ 10</p> <p>1000</p>						
	<p>x 5 K1-18051</p>	<p>36</p>  <p>x 1 K2-1077155 RAL 7016 K2-1077156 RAL 9005 K2-1077157 Pearl grey K2-1077158 RAL 9016</p>	<p>37</p>  <p>x 1 K2-1077184</p> <p>Polished Poliert Gepolijst Poli Poleret</p>	<p>38</p>  <p>∅ 40,2</p> <p>x 1 K1-01620</p>			
	<p>x 3 K2-1077735 RAL 7016 K2-1077736 RAL 9005 K2-1077737 Pearl grey K2-1077738 RAL 9016</p>	<p>39</p>  <p>x 5 K2-35426</p>	<p>40</p>  <p>x 6 K3-08001 ∅12 x 60</p>	<p>41</p>  <p>x 6 K3-04001 ∅10</p>	<p>42</p>  <p>x 6 K3-06338 ∅10 x 70</p>	<p>47</p>  <p>x 2 R3-91415 ∅8 x 40</p>	
	<p>49</p>  <p>x 1 K3-08002 ∅8 x 40</p>	<p>50</p>  <p>∅ 8</p> <p>x 1 K1-01810</p>	<p>51</p>  <p>x 3 K3-06239 ∅4,5 x 25 PZ2</p>	<p>56</p>  <p>x 2 K3-06290 ∅4,5 x 40</p>	<p>57</p>  <p>x 2 K3-06286 ∅5 x 50</p>	<p>59</p>  <p>Wood glue Holzkleber Colle à bois Trælim Houtlijm</p> <p>x 1 K3-90005</p>	
<p>60</p>  <p>Strong glue Superkleber Seconde lijm Colle forte Superlim</p> <p>x 1 K3-90005</p>							







**Extension kit  
Ergänzungspaket**



**Uitbreidingsset  
Kit de suite**



**Forlængerpakke**



<p>8</p> 	<p>30</p>  <p>x 5 K3-08023</p>				
	<p>32</p>  <p>1000</p> <p>Beech / Buche / Beuken / Hêter / Bøg Oak / Eiche / Bijv / Chêne / Eg Oak white / Eiche weiß / Bijv wit / Chêne blanc / Eg hvid</p>				
	<p>33</p>  <p>1000</p>				
	<p>40</p>  <p>x 4 K3-08001 Ø12 x 60</p>	<p>41</p>  <p>x 4 K3-04001 Ø10</p>	<p>42</p>  <p>x 4 K3-06338 Ø10 x 70</p>	<p>47</p>  <p>x 2 R3-91415 Ø8 x 40</p>	<p>48</p>  <p>x 2 K3-06239 Ø4,5 x 25 PZ2</p>
	<p>x 2 K2-1077735 RAL 7016 K2-1077736 RAL 9005 K2-1077737 Pearl grey K2-1077738 RAL 9016</p>				







 Tools not included!  
Werkzeuge nicht enthalten!  
Gereedschap niet inbegrepen!  
Outils non inclus!  
Værktøj ikke inkluderet!

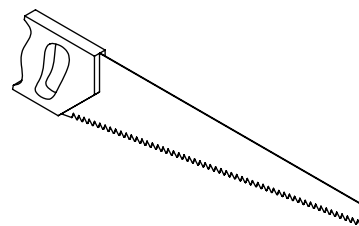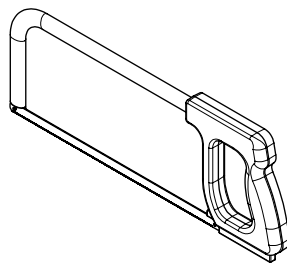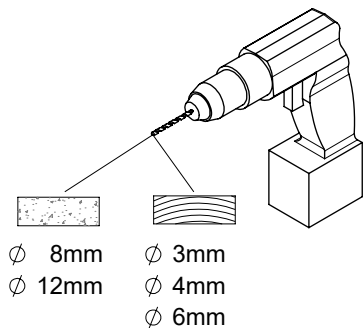

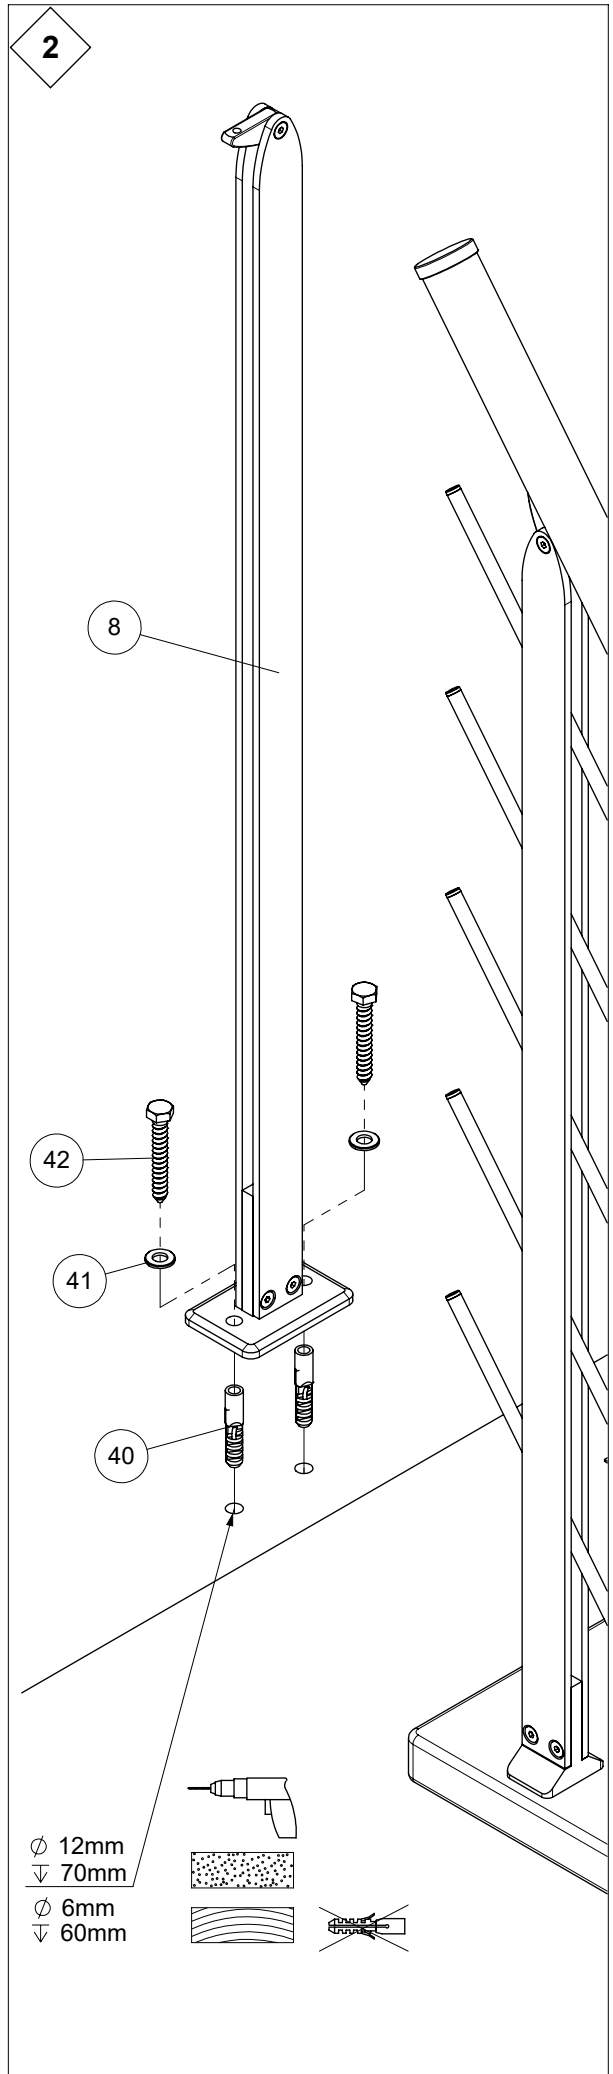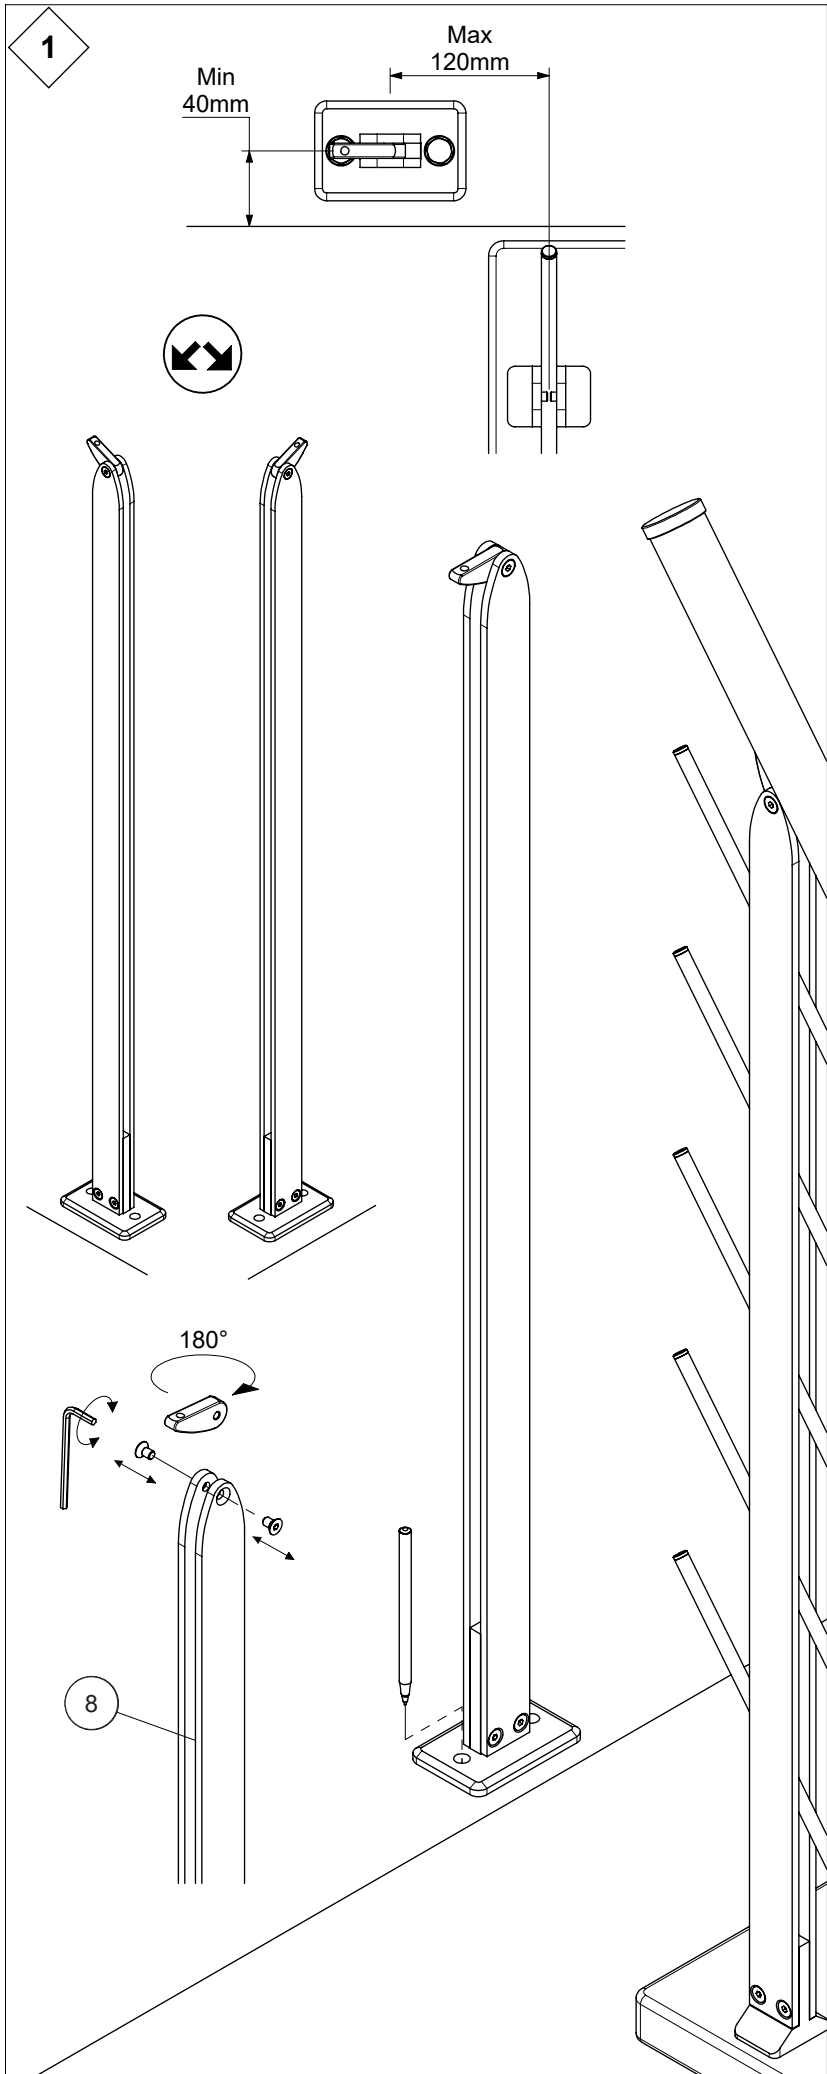


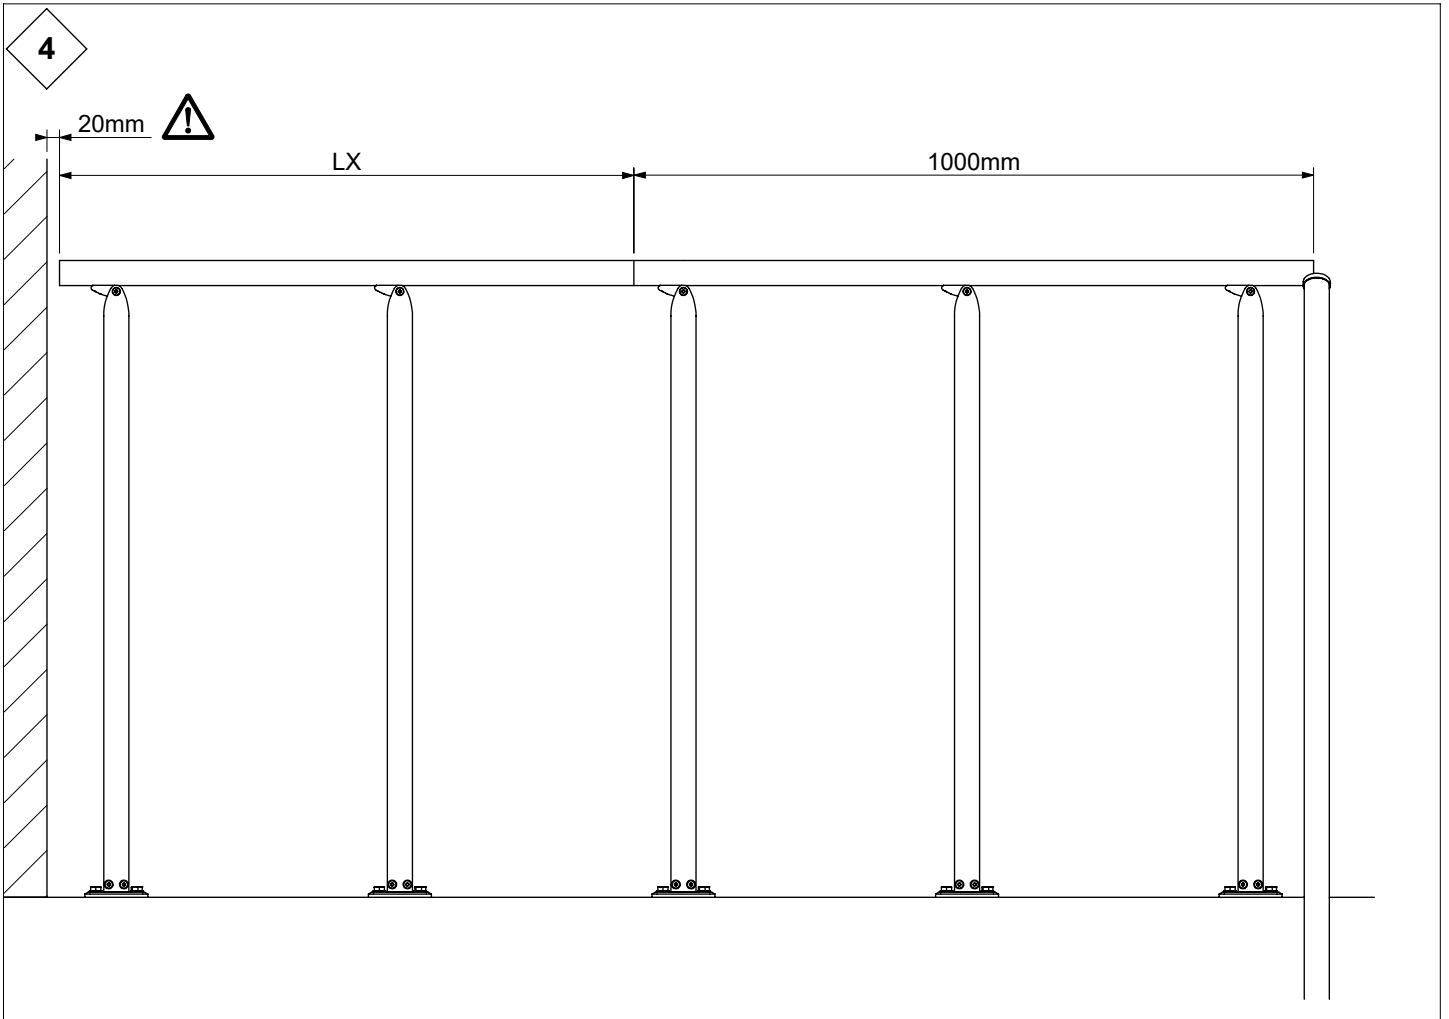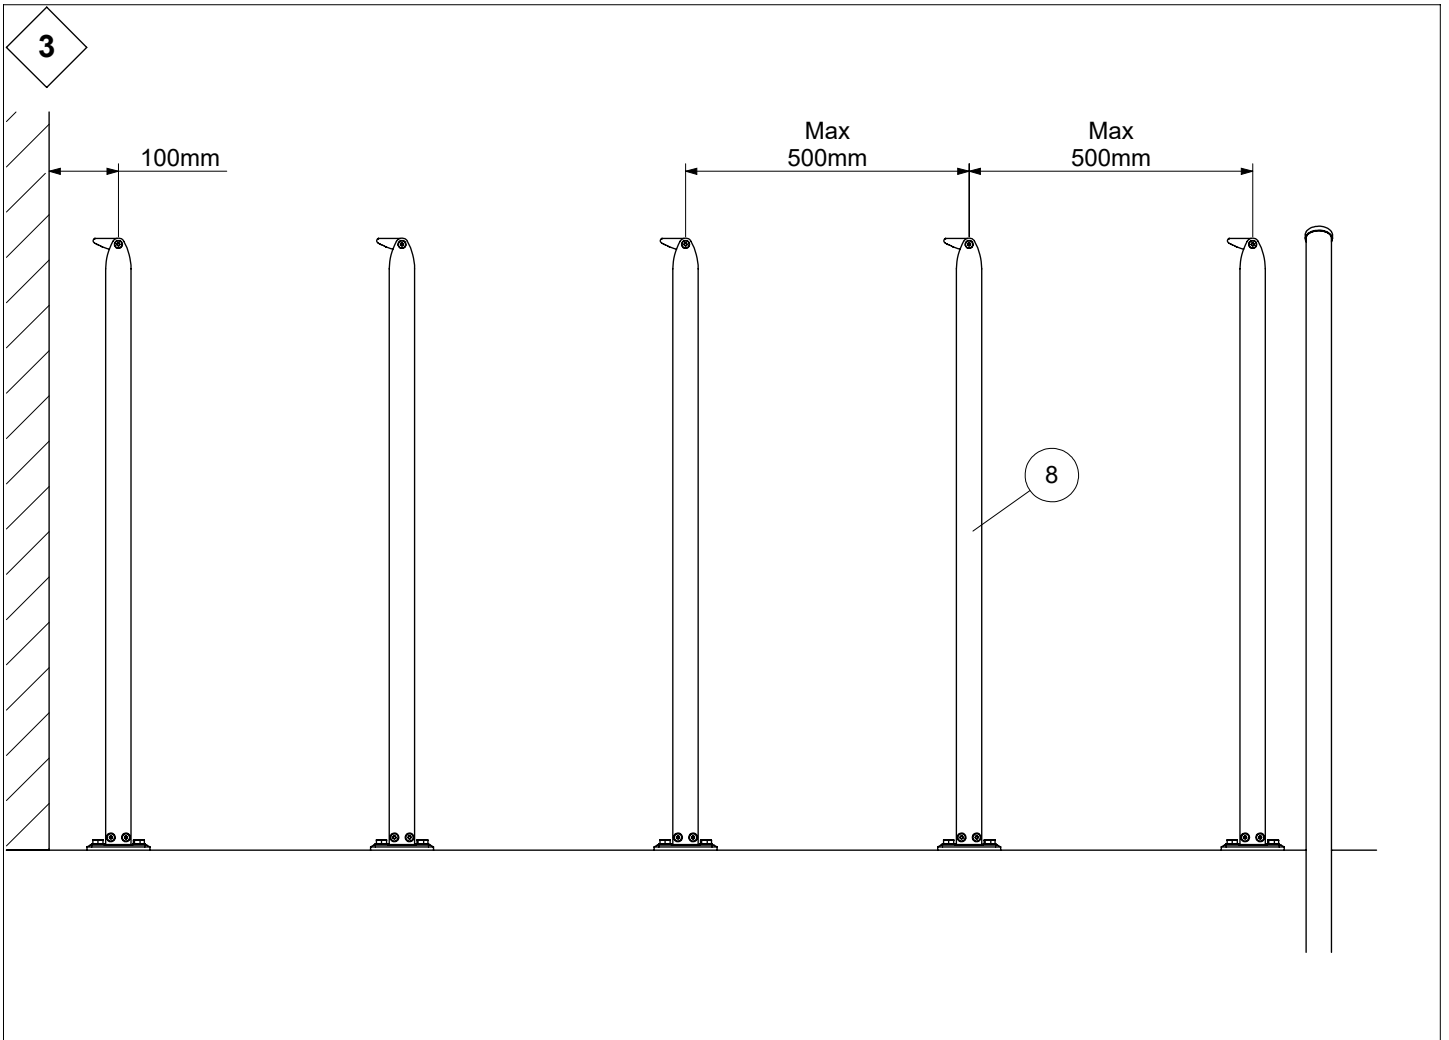

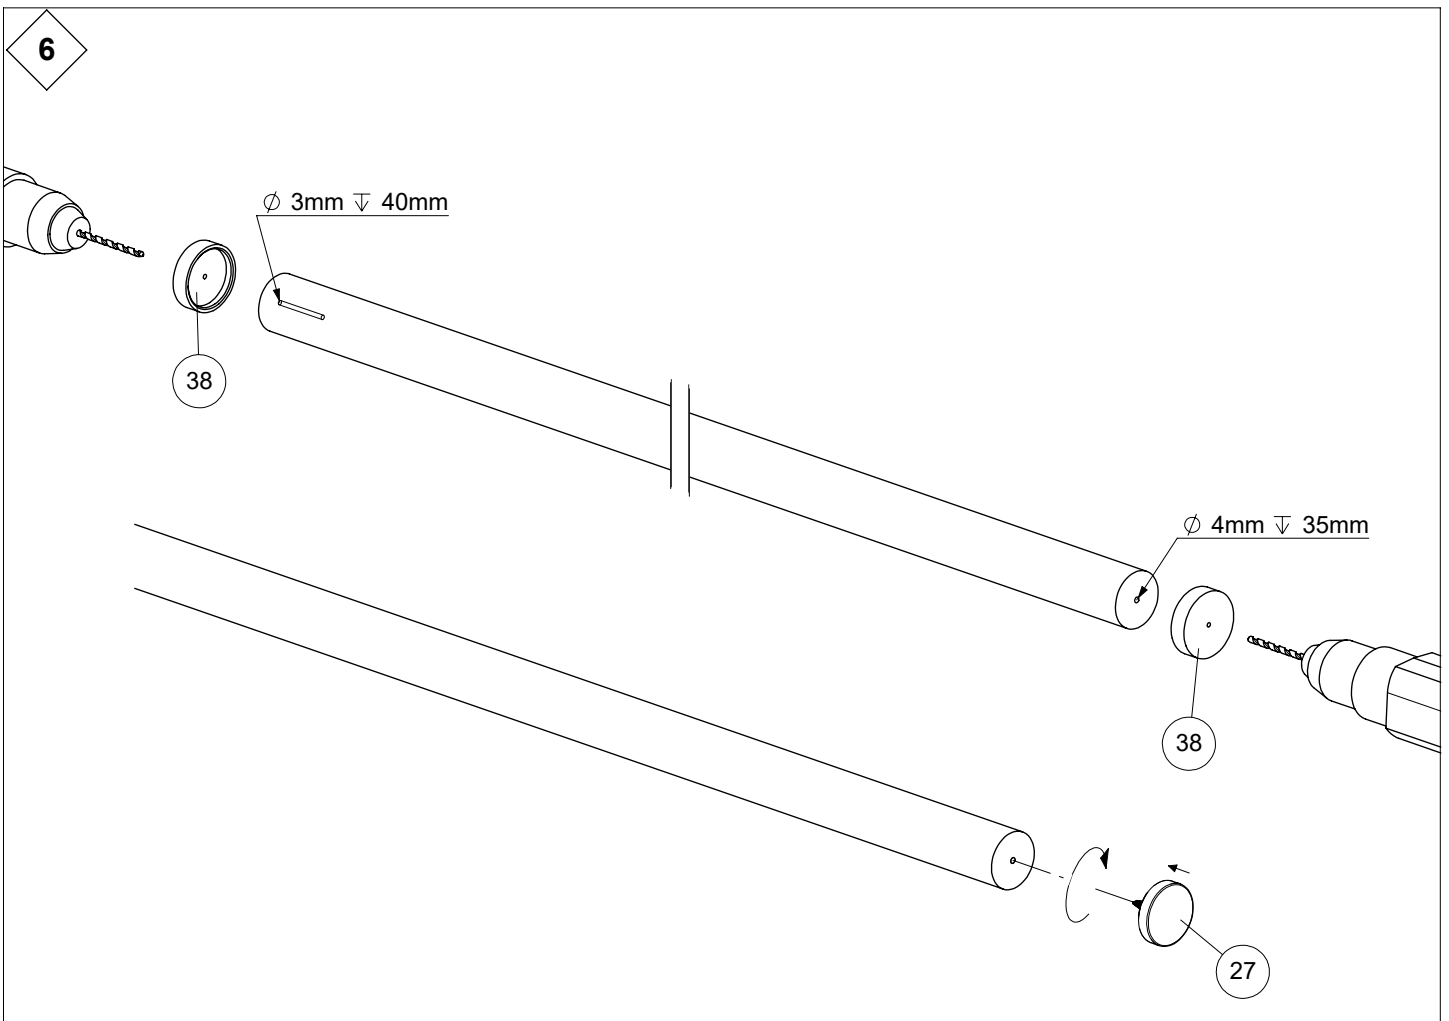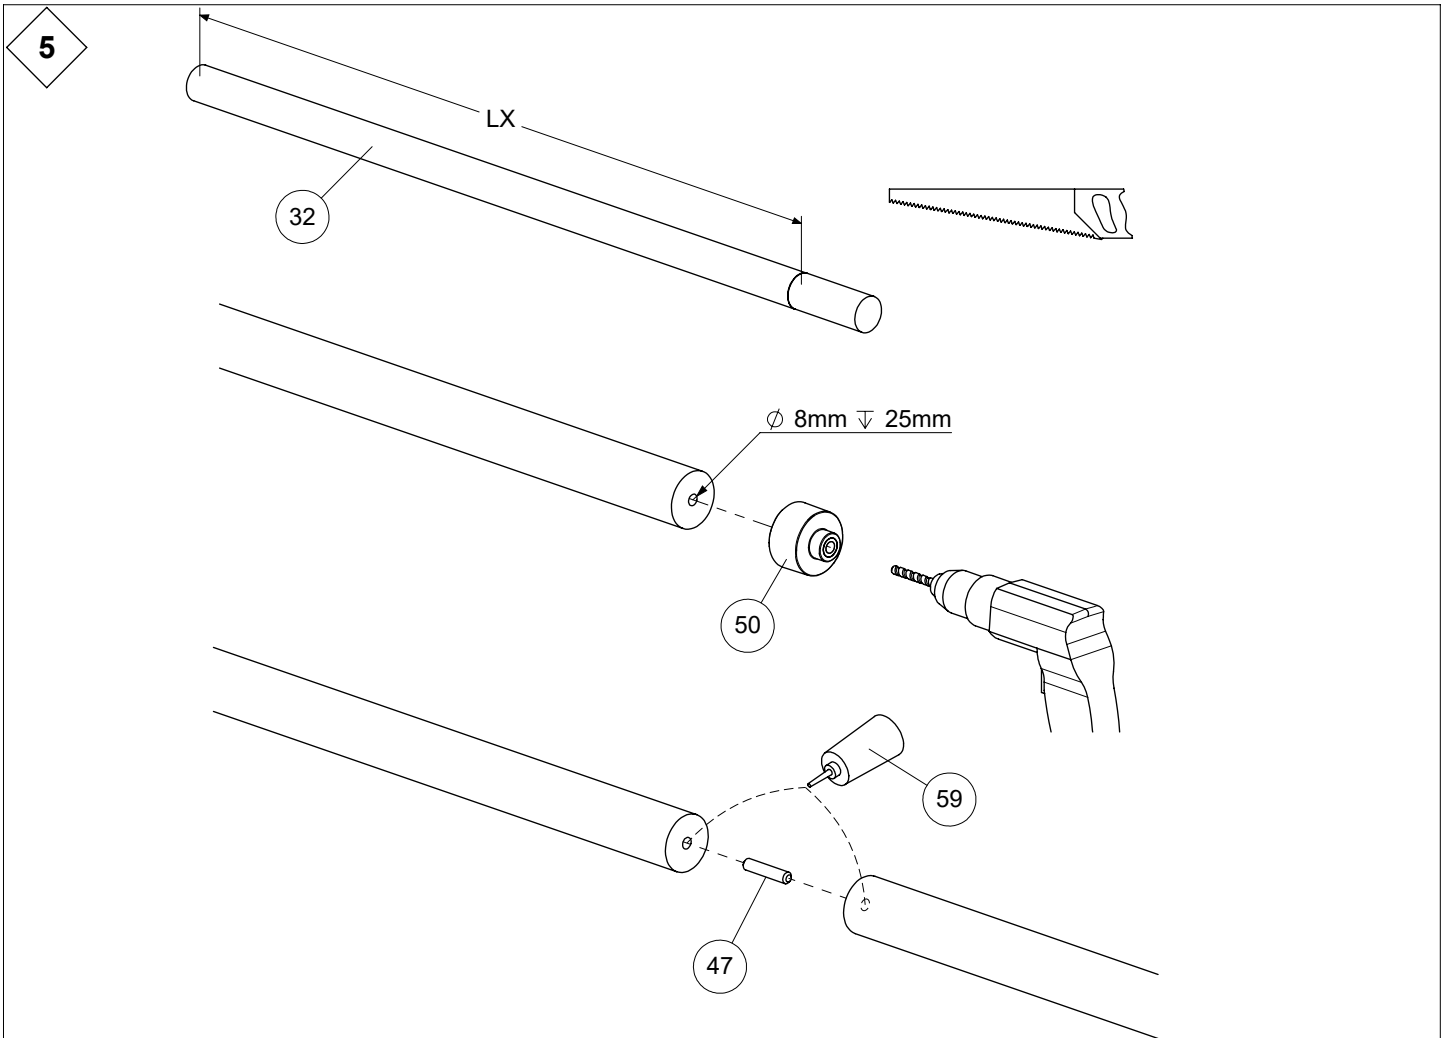

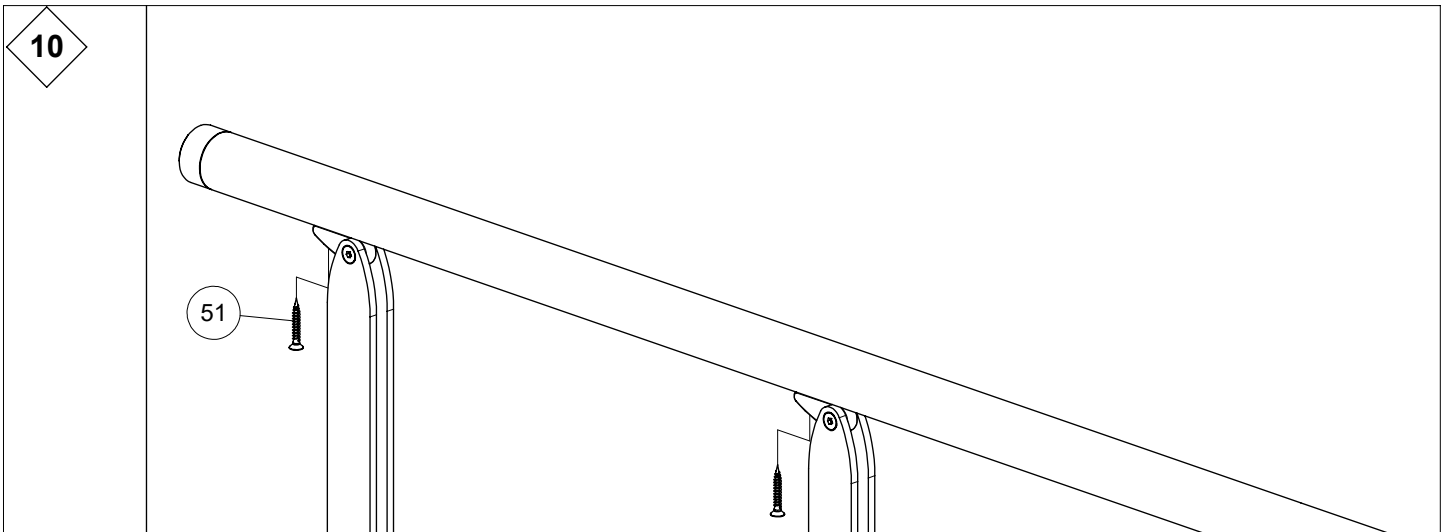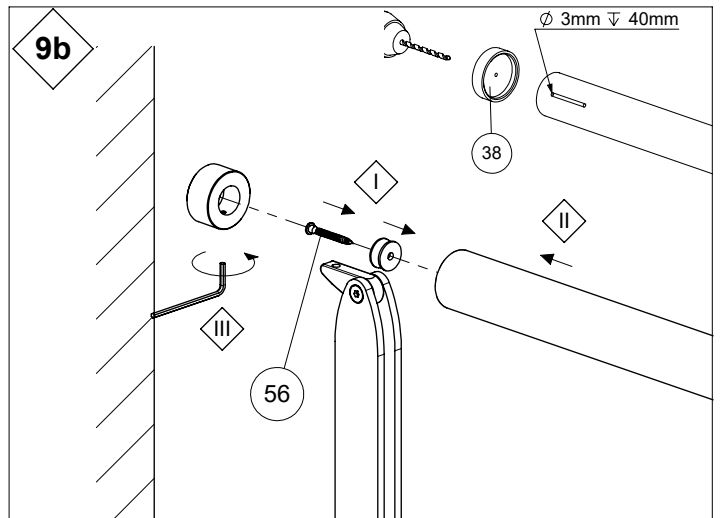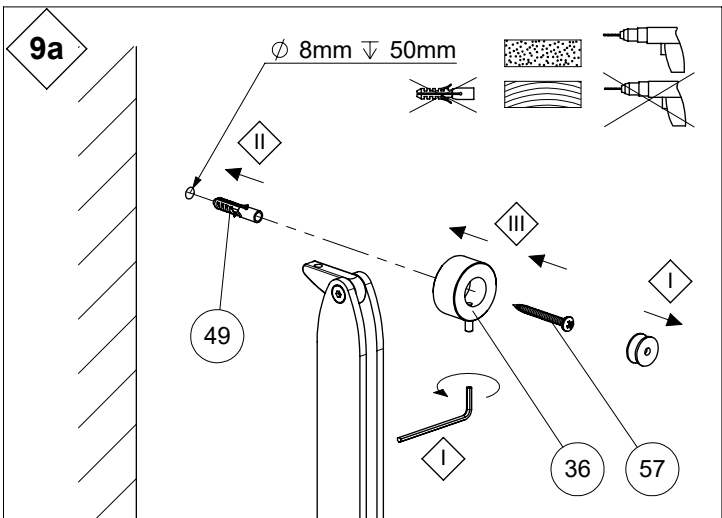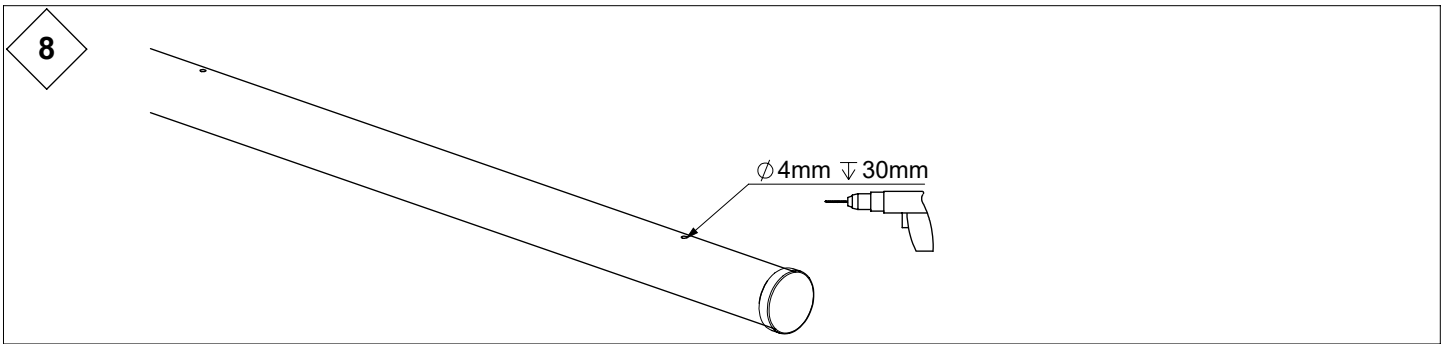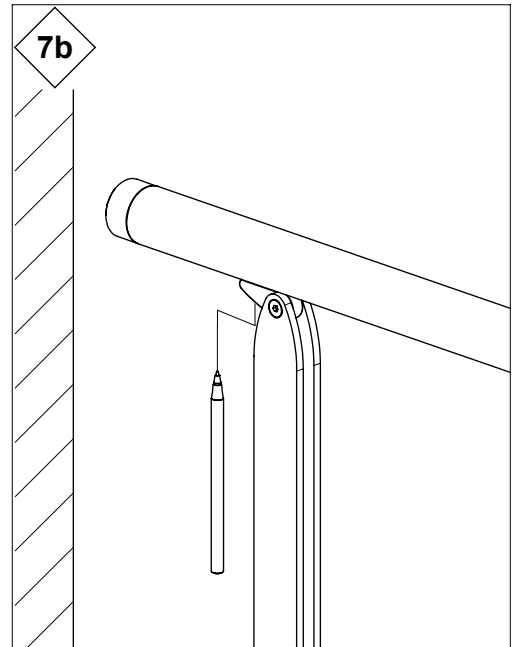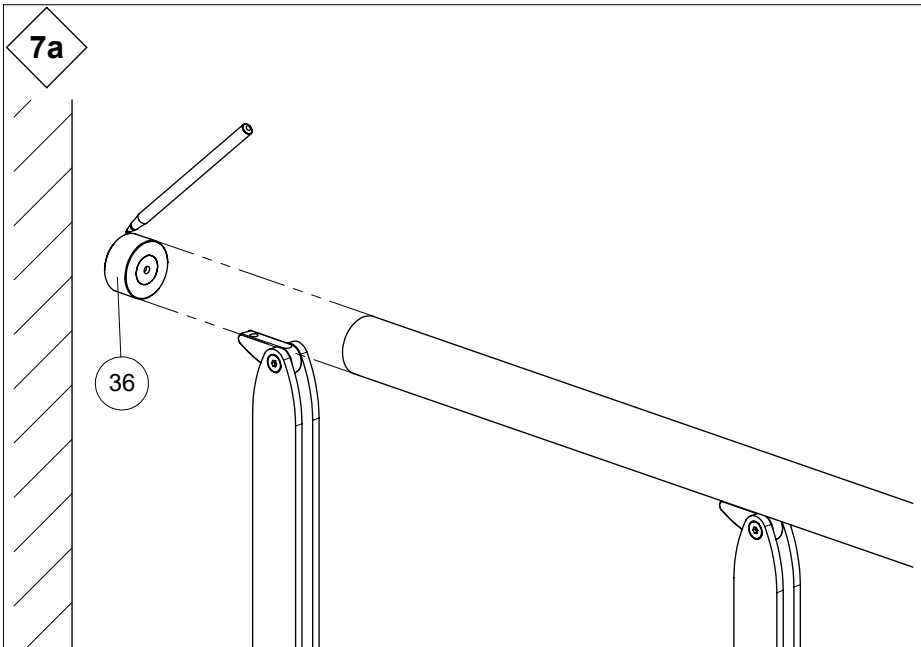


11

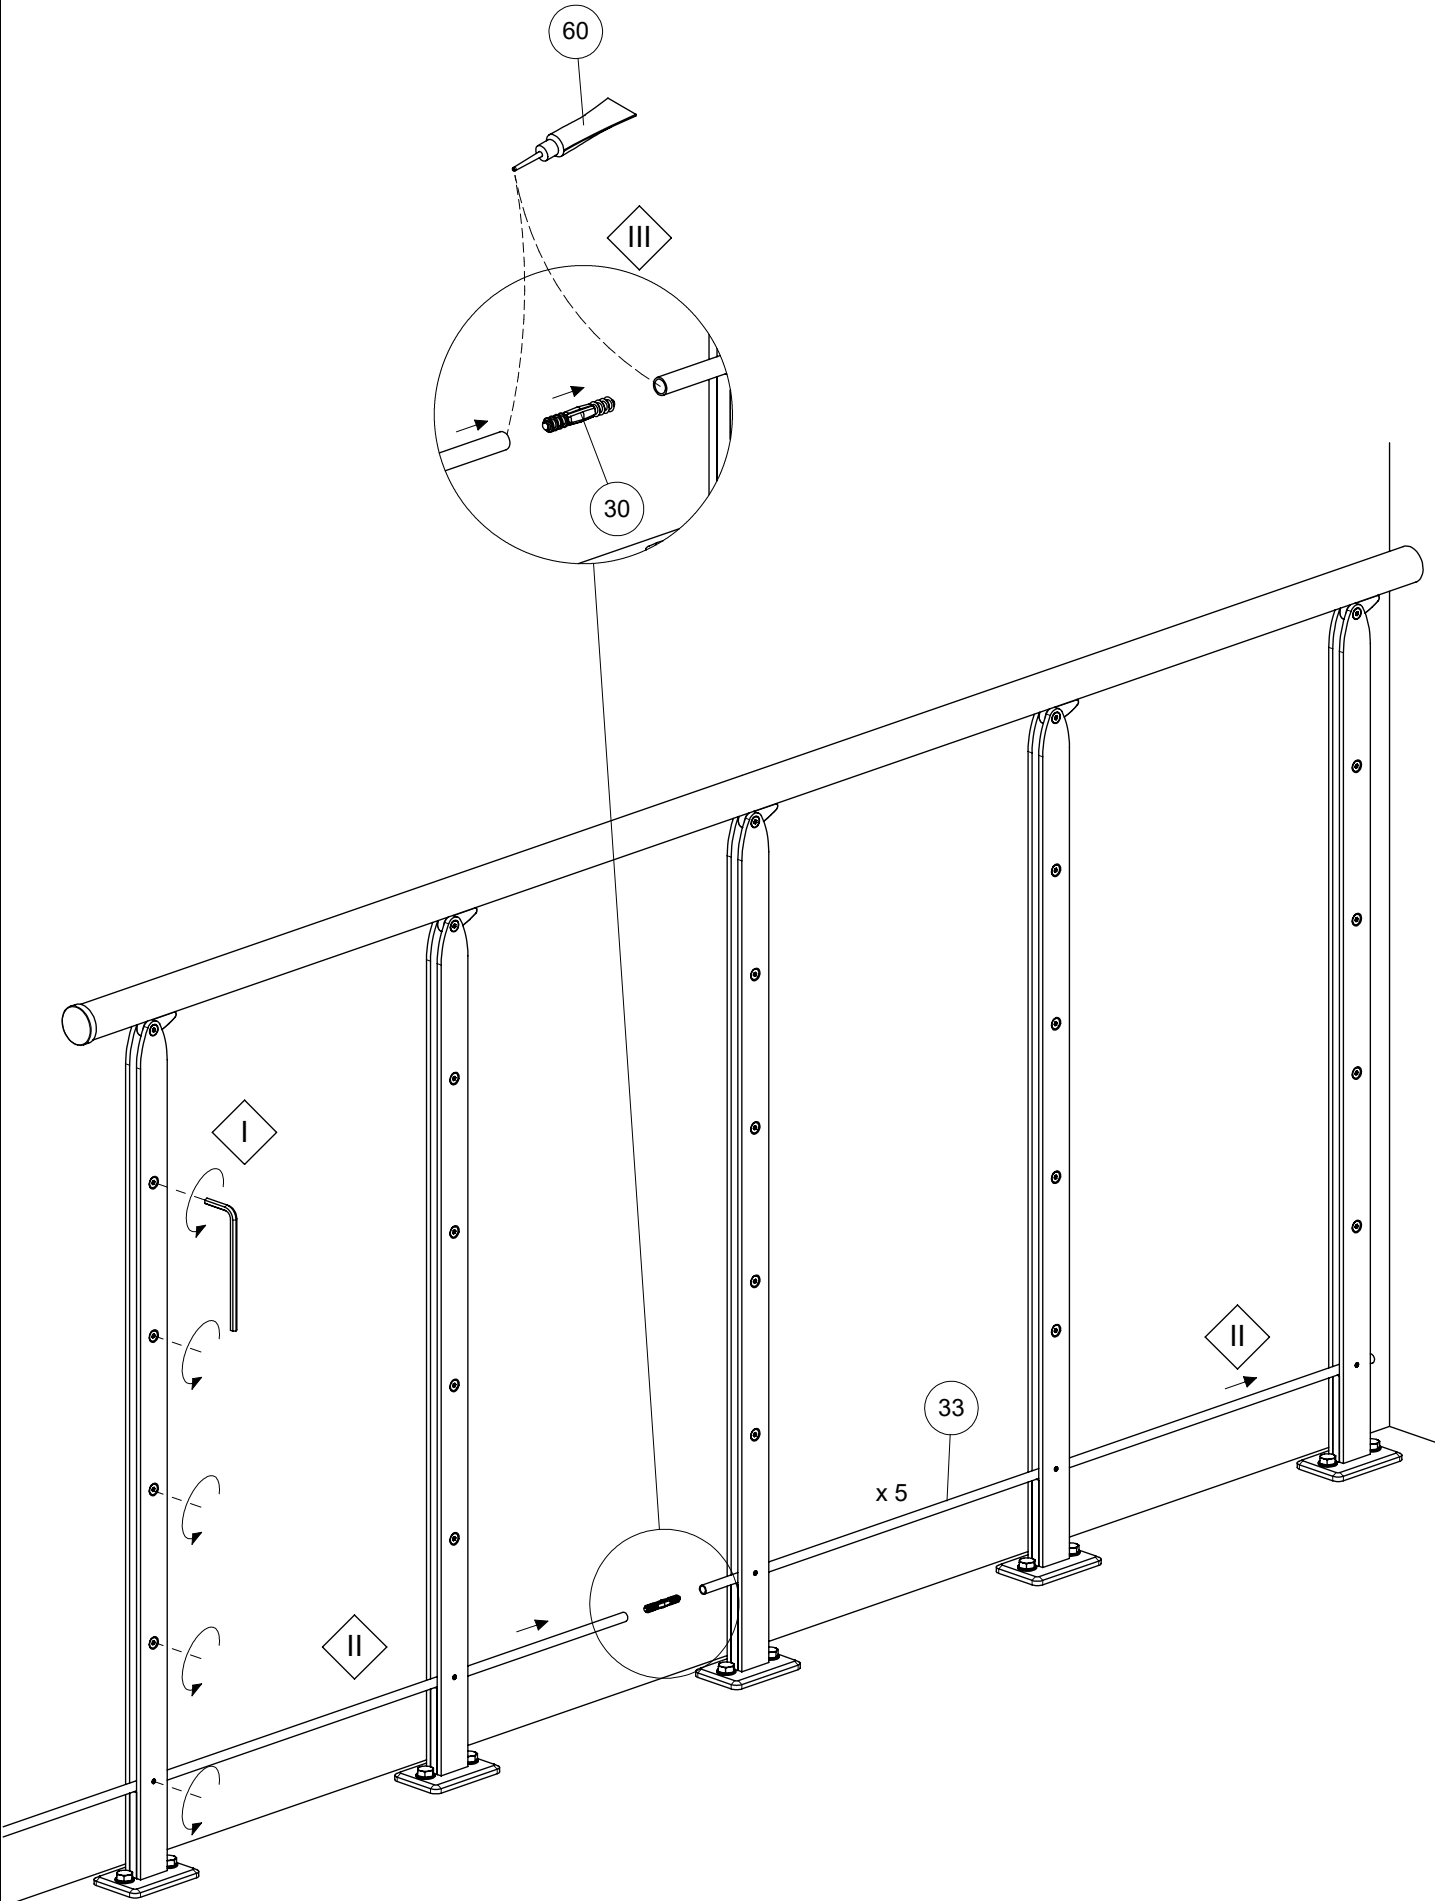





12

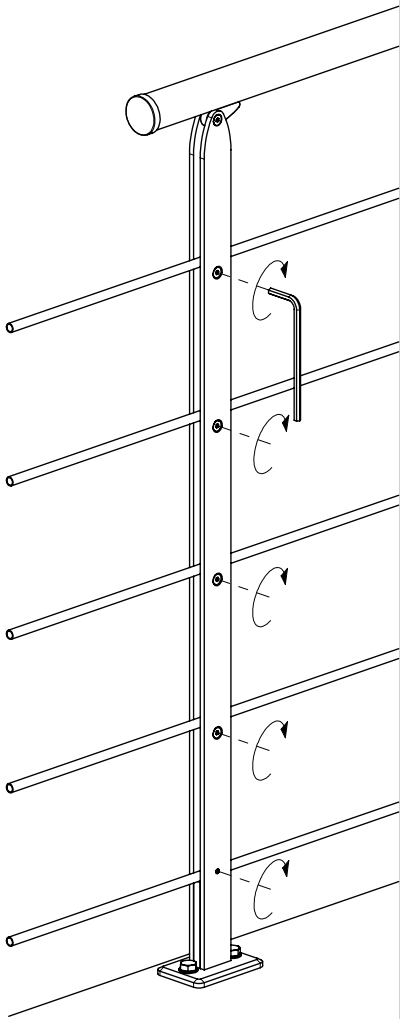

13


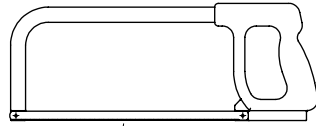


50 - 80mm

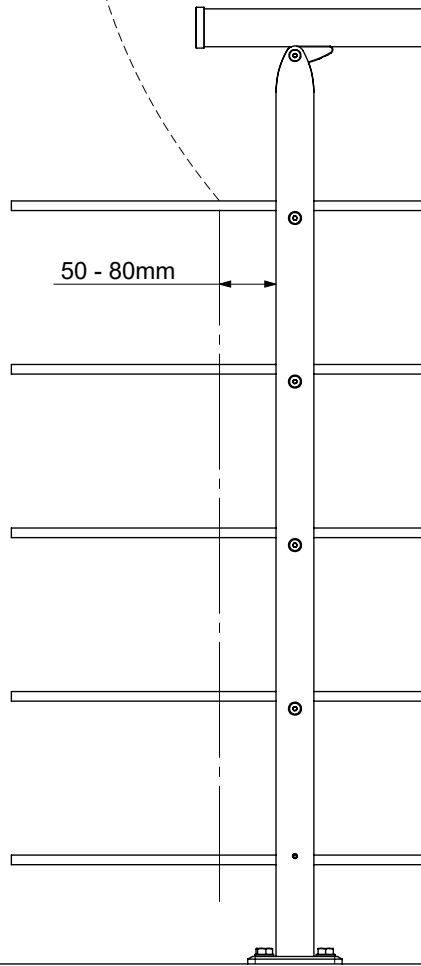


14

49

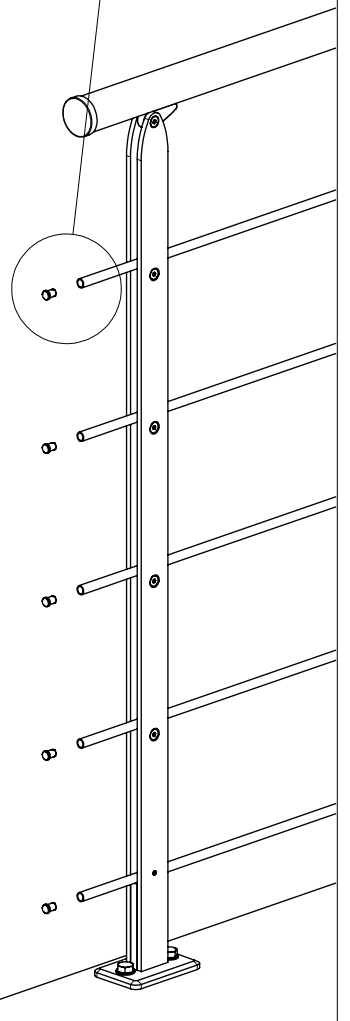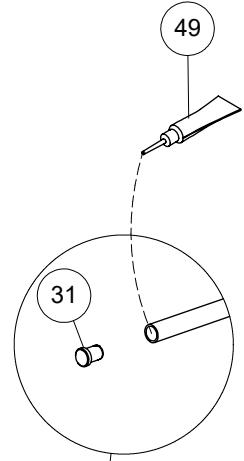

15

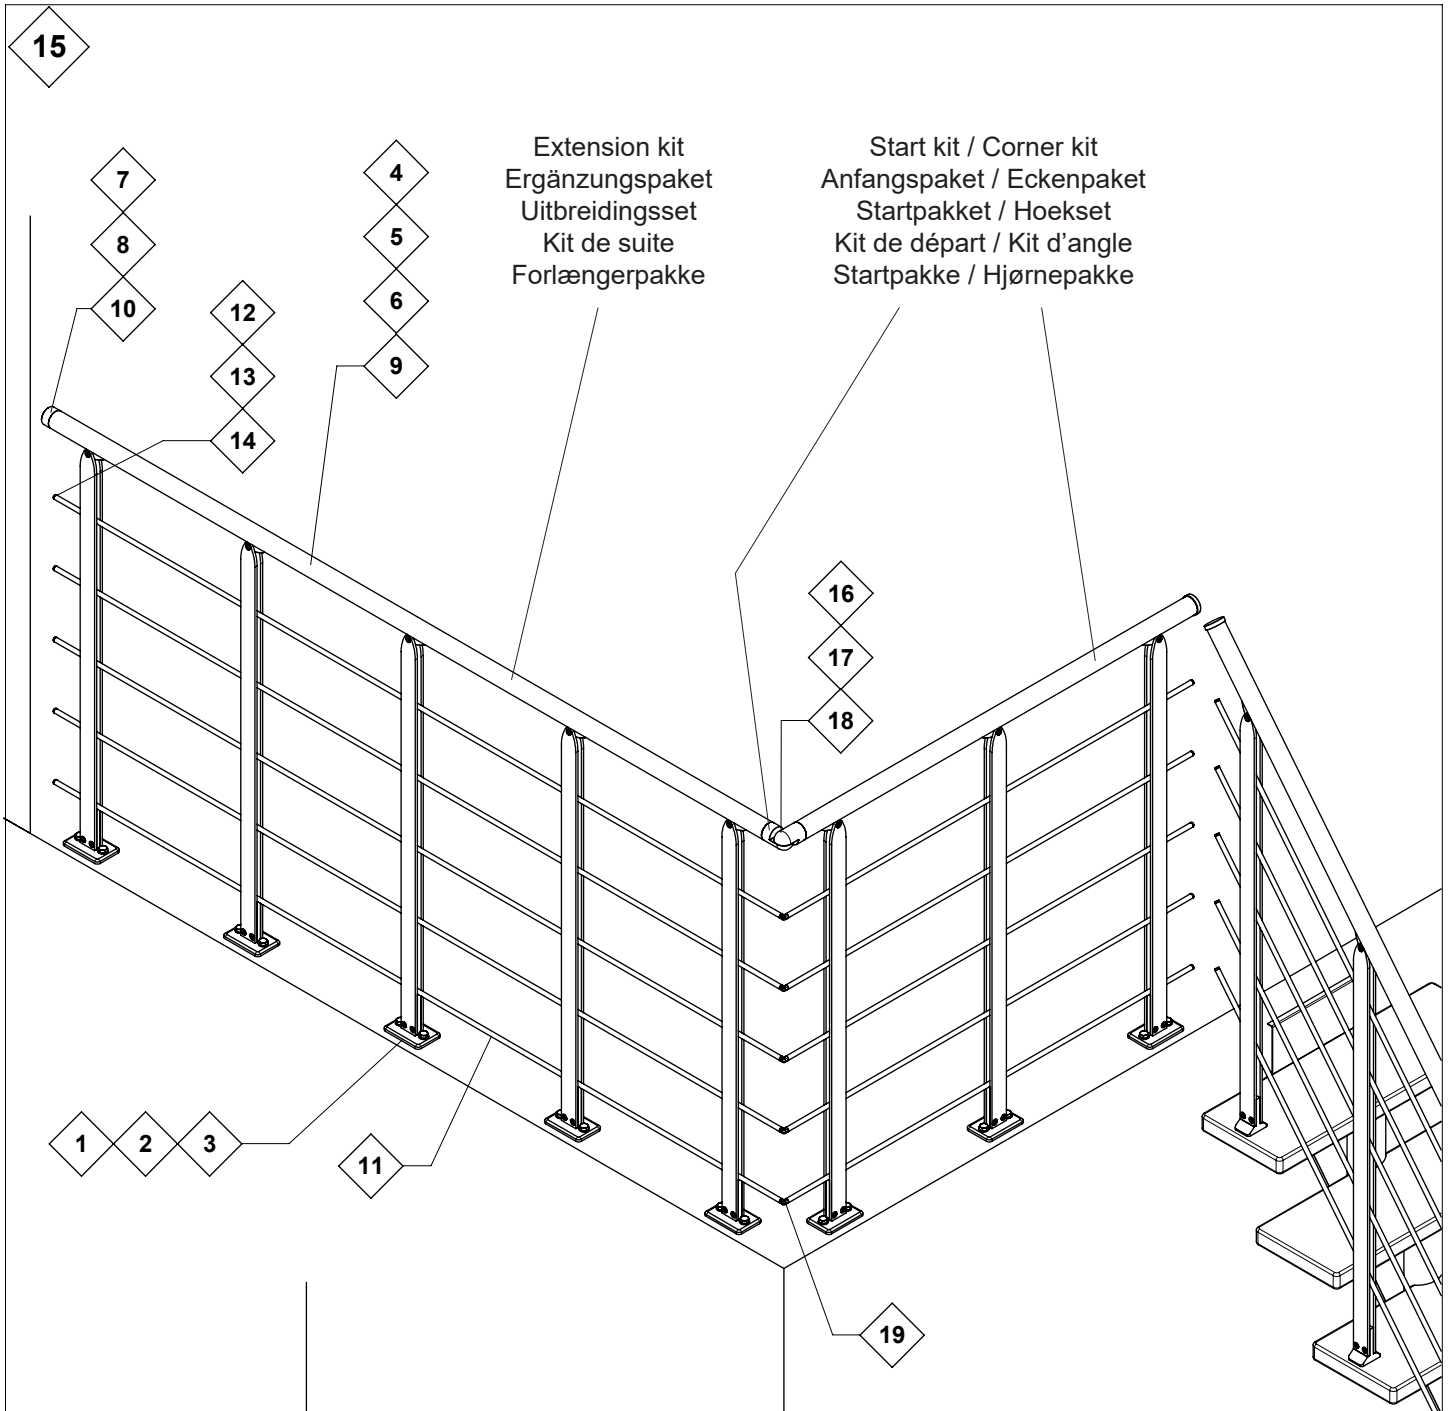

Extension kit  
Ergänzungspaket  
Uitbreidingsset  
Kit de suite  
Forlængerpakke

Start kit / Corner kit  
Anfangspaket / Eckenpaket  
Startpakket / Hoekset  
Kit de départ / Kit d'angle  
Startpakke / Hjørnepakke

1 2 3

11

16

17

18

19

