


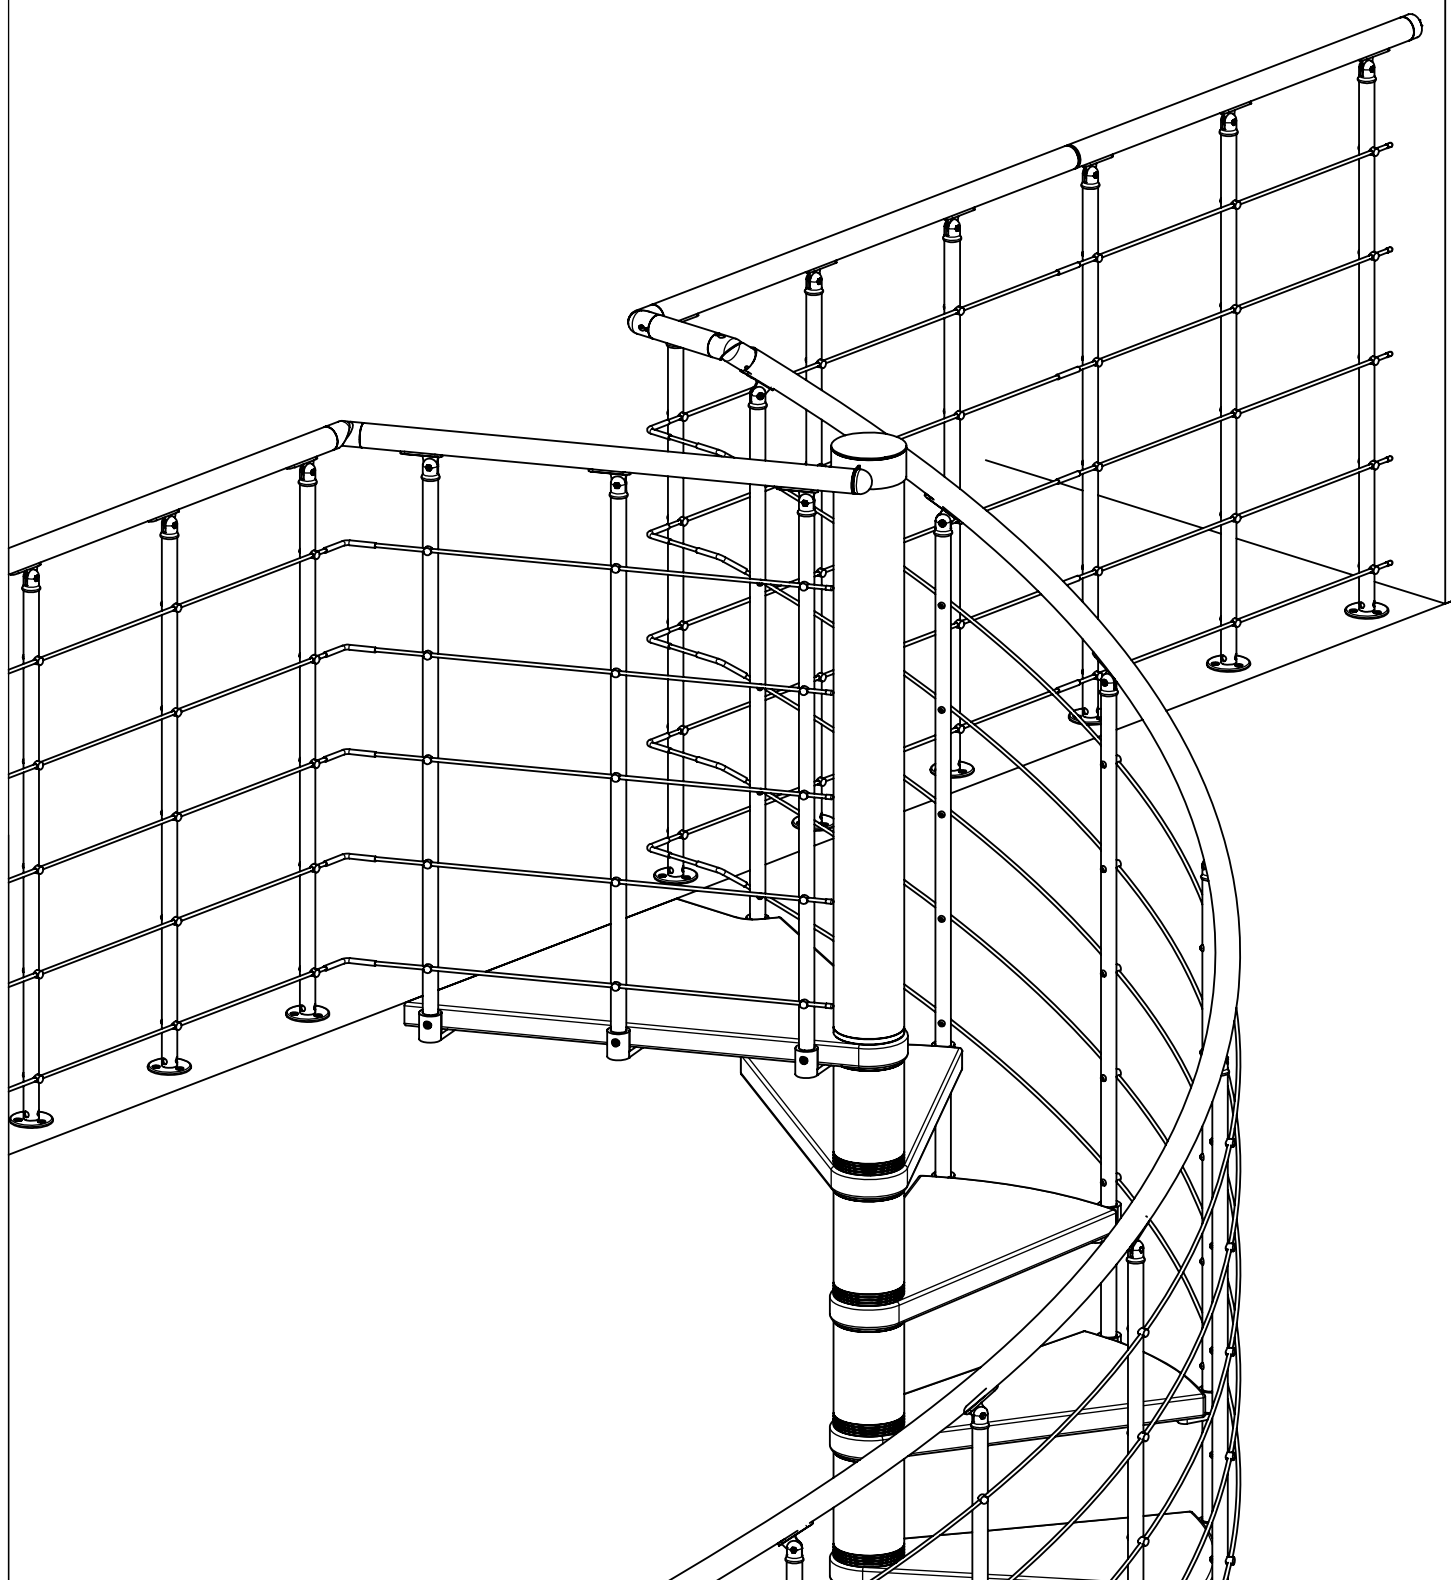
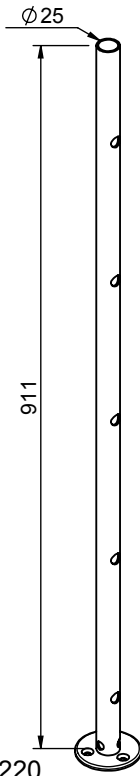






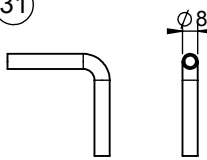
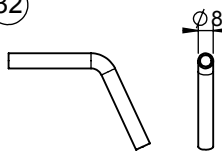



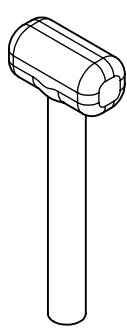
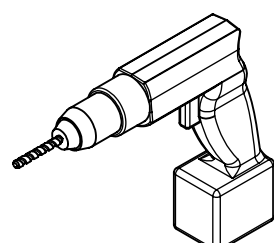
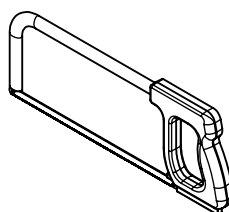
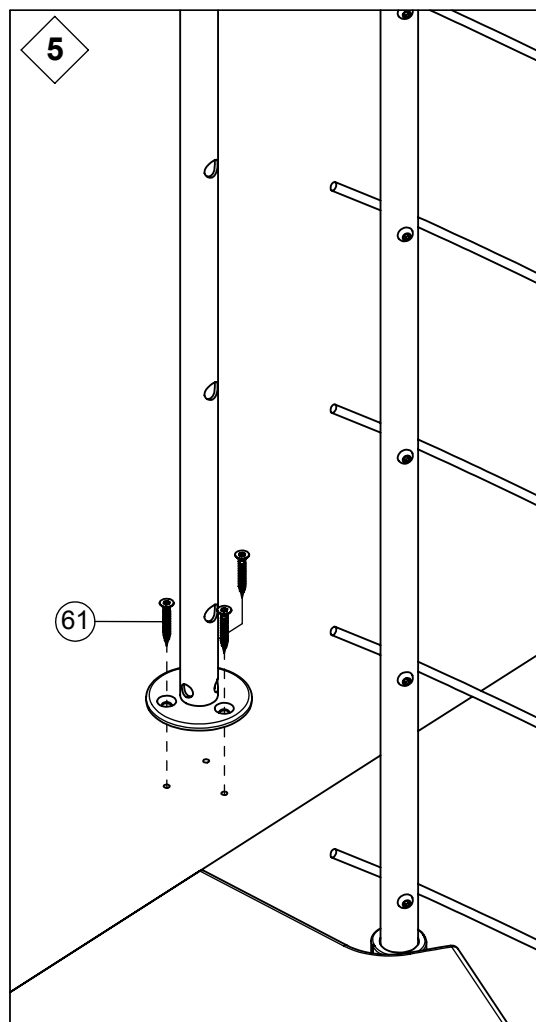
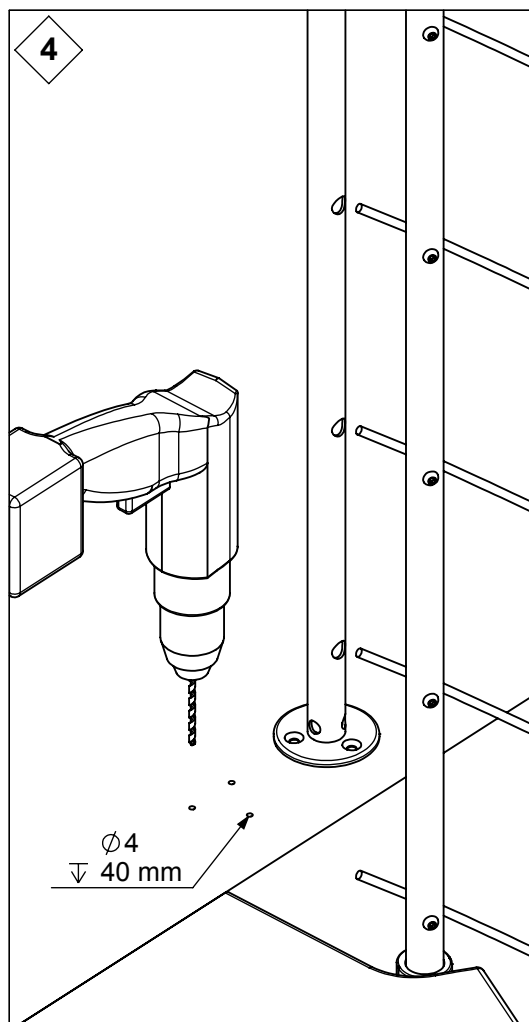


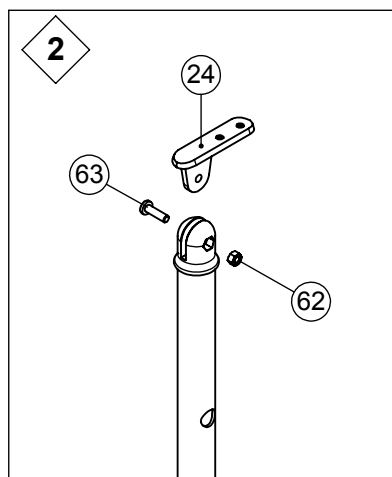


Einbauanleitung - Brüstungsgeländer - Oslo - grau
Mounting Instructions Balcony Banister - Oslo grey
Instructions de Montage de Balustrade - Osly gris

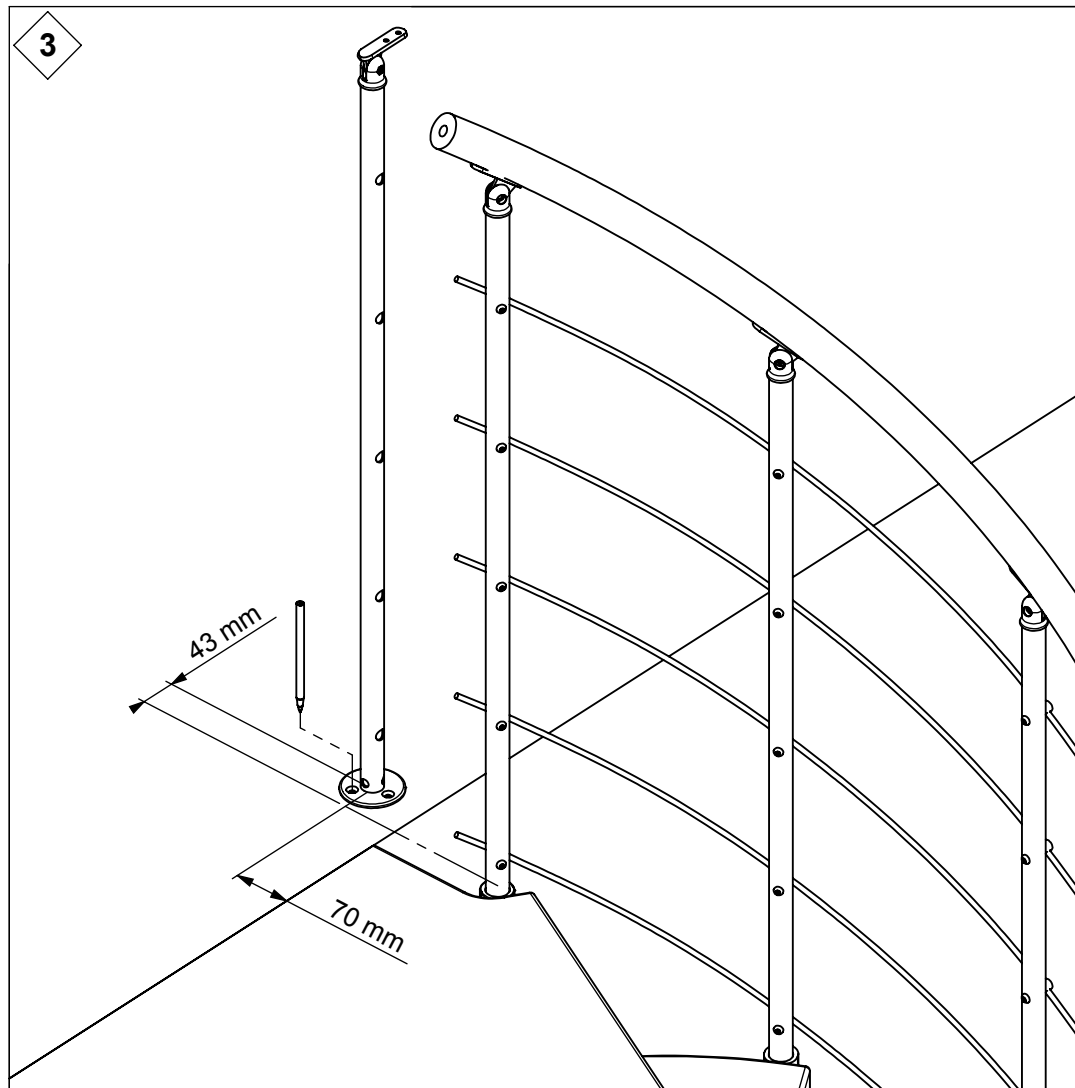


(I) Start kit (II) Extension kit		Kit de départ Kit de suite	Startpaket Extrapaket	Startpakke Ekstrapakke	
22  (I): x4 (II): x3 K2-32220	23  (I): x4 (II): x3 K1-32226	24  (I): x4 (II): x3 K1-32225	25  (I): x20 (II): x15 K1-04041	26  (II): x1 K1-32300	27  (I): x2 K2-32040
	28  (I): x5 (II): x5 K1-14070 				
	29  (I): x1 K2-32621 				
	30  (II): x1 K2-32622 				
31  (I): x5 K1-14941	32  (I): x5 K1-14942	34  x5 K1-04050	36  (II): x5 K1-14939	37  (I): x1 K2-32255	38  (II): x5 K1-32630
42  (I): x1 K3-90001	59  (I): x20 (II): x15 K1-04040 M6x16	60  (I): x4 R1-63616 Ø10	61  (I): x21 (II): x15 K3-06022 Ø5x35	62  (I): x4 (II): x3 K3-03020 M5	63  (I): x4 (II): x3 K3-01002 M5x18
  Torx 25 Torx 40 PH 2  4  3  2,5 					
 					

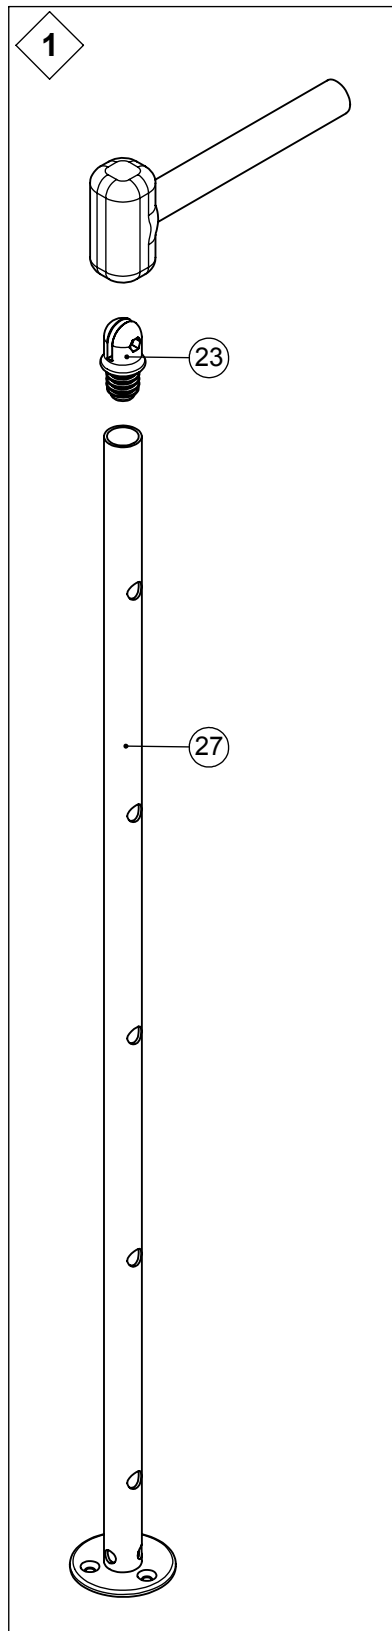


6

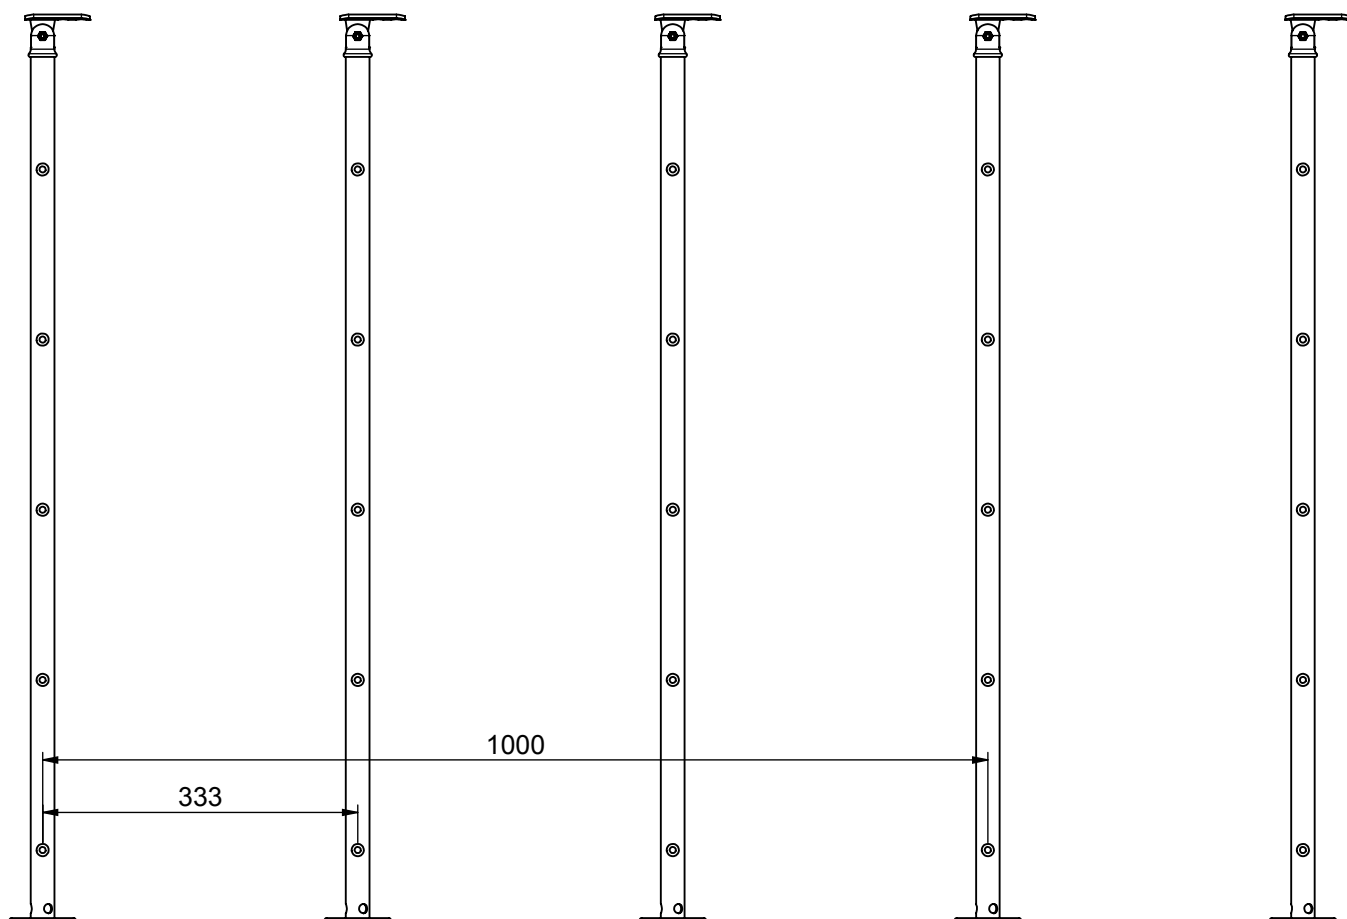

7

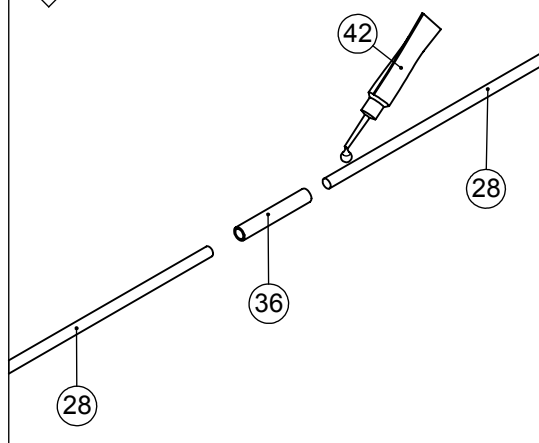

8

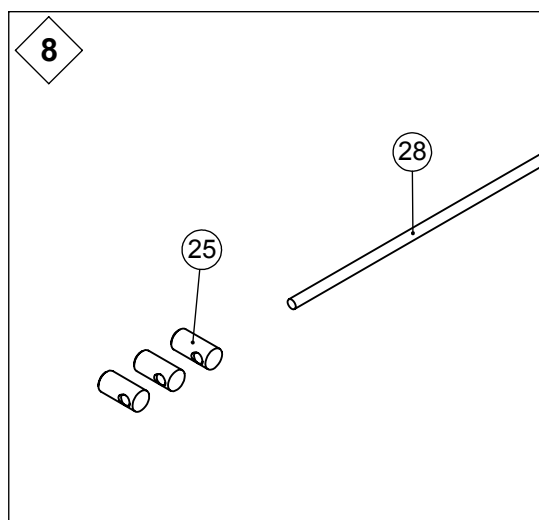

9

